



PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

The image shows two screenshots of software dialog boxes with red callout boxes providing instructions.

Print Dialog Box:

- Printer:** FUJI XEROX DocuPrint CM215 fw...
- Copies:** 1
- Pages to Print:** All (selected), Current page, Pages 1-3
- Page Sizing & Handling:** Size (selected), Poster, Multiple, Booklet. Under Size, **Actual size** is selected. Other options include Fit, Shrink oversized pages, Custom Scale (100%), and Choose paper source by PDF page size.
- Orientation:** Auto portrait/landscape (selected), Portrait, Landscape.
- Annotations:** A red box labeled "Select Actual size" points to the "Actual size" radio button. Another red box labeled "Set the paper size" points to the "Page Setup..." button at the bottom left.

Page Setup Dialog Box:




- Settings:** Page Attributes
- Format For:** Any Printer
- Paper Size:** A4 (selected). A red box labeled "Select the paper size" points to this dropdown.
- Orientation:** Portrait (selected)
- Scale:** 100% (selected). A red box labeled "Scale 100%" points to this field.
- Buttons:** Cancel, OK

IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download

<https://get.adobe.com/reader>

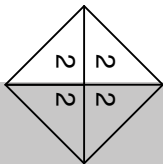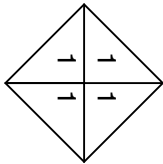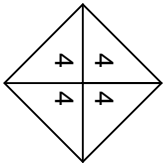

CraftsmanGus : Pattern

Simple Messenger Bag : Pillow M

Mss S01 #4mm.

 
 
 
Main Body : Front & Back / Layout

1.8 mm. REC (max)

X 1

TILE TO PAGE 2



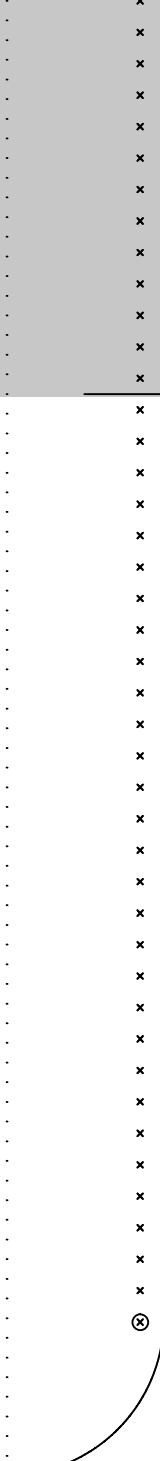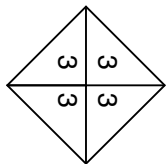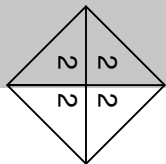



s : Pattern




ag : Pillow M

Back / Layout

X 1

     
TILE TO PAGE 1

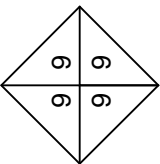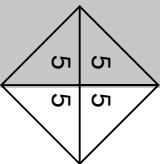


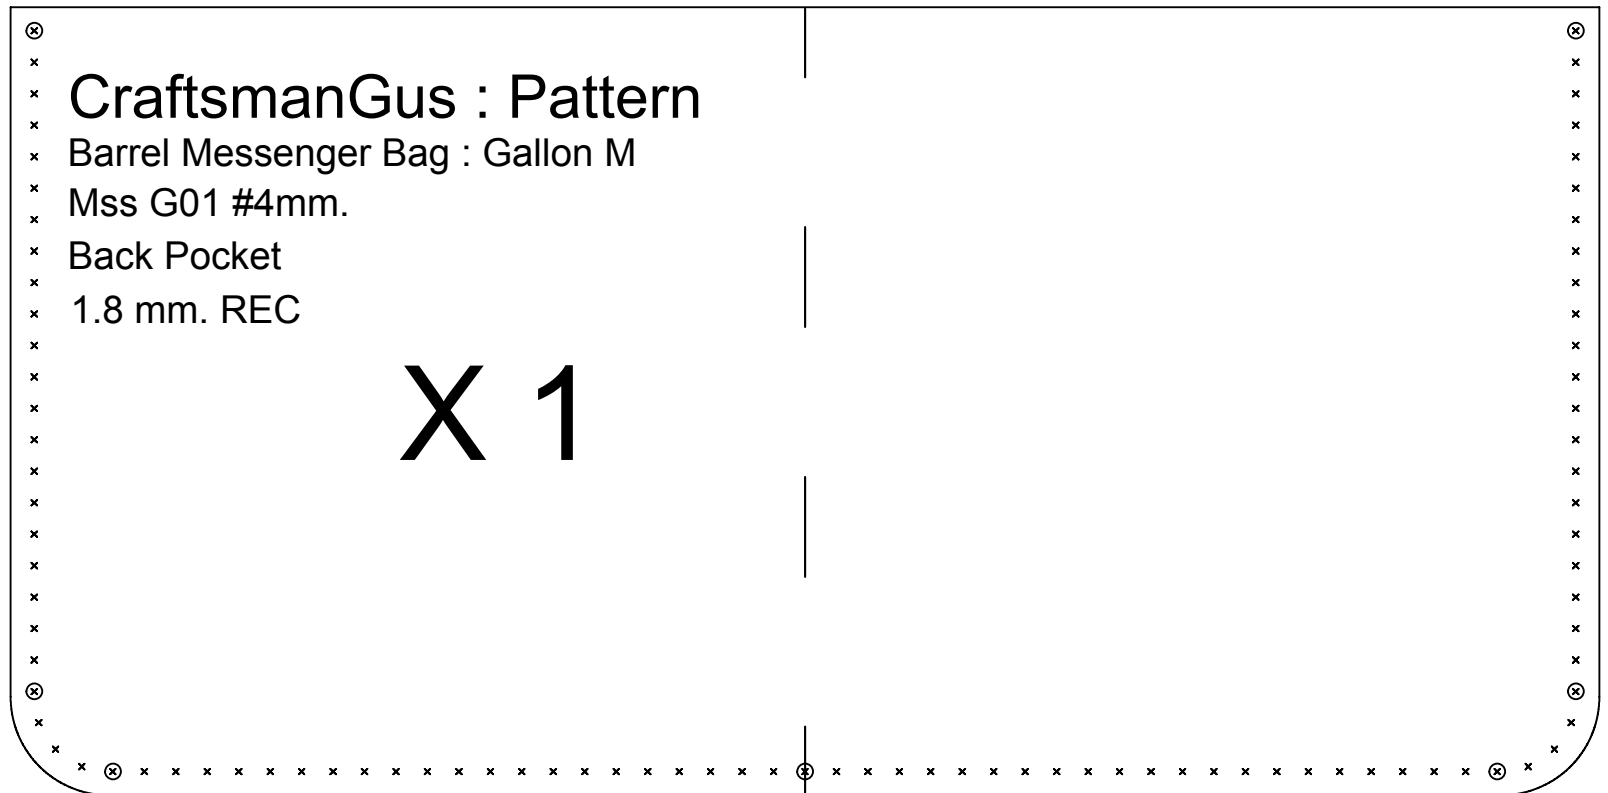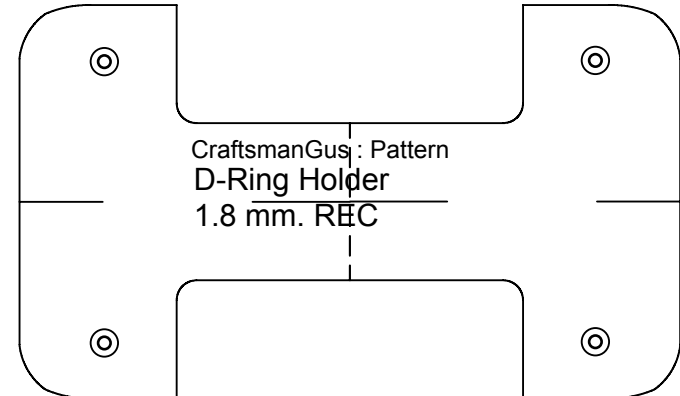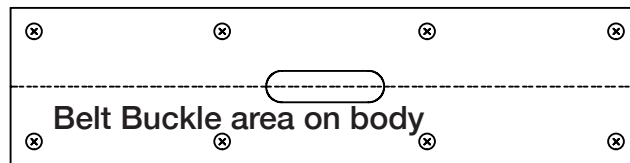



TILE TO PAGE 5

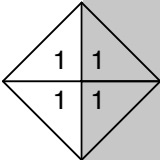 

 

CraftsmanGus : Pattern

Simple Messenger Bag : Pillow M Mss S01 #4mm. Strap

1.8-2.5 mm. REC **X 1** Can adjust a



CraftsmanGus : Pattern

Simple Messenger Bag : Pillow M Mss S01 #4mm. Strap

1.8-2.5 mm. REC **X 1** Can adjust a

 


* this back side of stitching may varies

CraftsmanGus : Pattern


Simple Messenger Bag : Pillow M
Mss S01 #4mm.
Front Opening Interfacing

1.8 mm. REC **X 2**

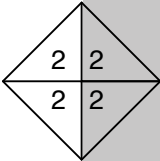




TILE TO PAGE 4



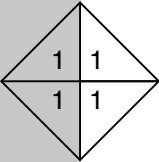 


anGus : Pattern					
senger Bag : Pillow M	Mss S01 #4mm.	Strap	1.8-2.5 mm. REC	X 1	Can adjust about to 20-35 cm. +/- per fav.

anGus : Pattern					
senger Bag : Pillow M	Mss S01 #4mm.	Strap	1.8-2.5 mm. REC	X 1	Can adjust about to 90-120 cm. +/- per fav.

CraftsmanGus : Pattern					
Simple Messenger Bag : Pillow M					
Mss S01 #4mm.					
Front Opening Interfacing					
			1.8 mm. REC	X 2	* this back side of stitching may varies

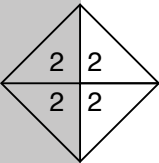 

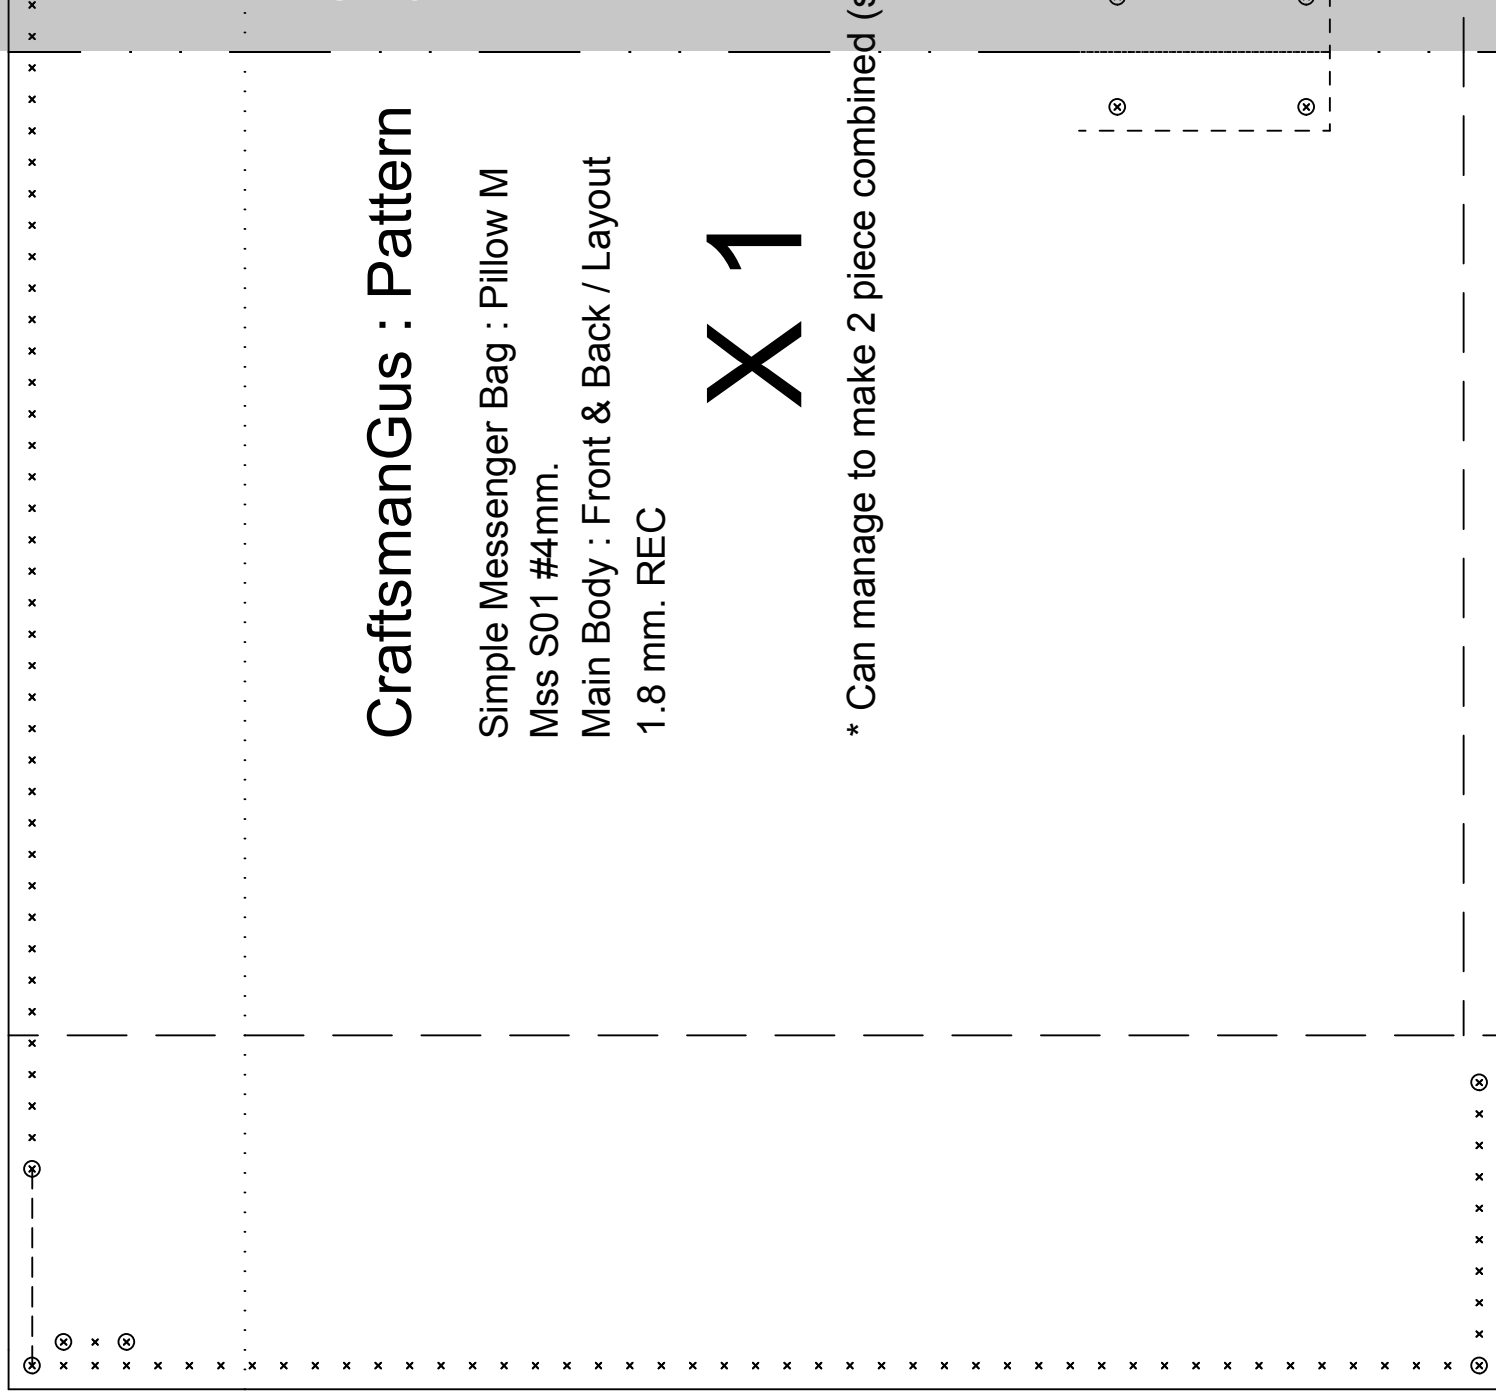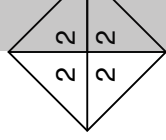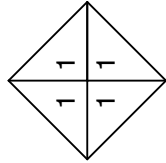   

TILE TO PAGE 7

CraftsmanGus : Pattern

Simple Messenger Bag : Pillow M

 
 
Mss S01 #4mm.

 
 
 
Main Body : Front & Back / Layout

1.8 mm. REC

X 1

* Can manage to make 2 piece combined (s

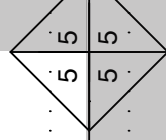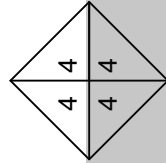

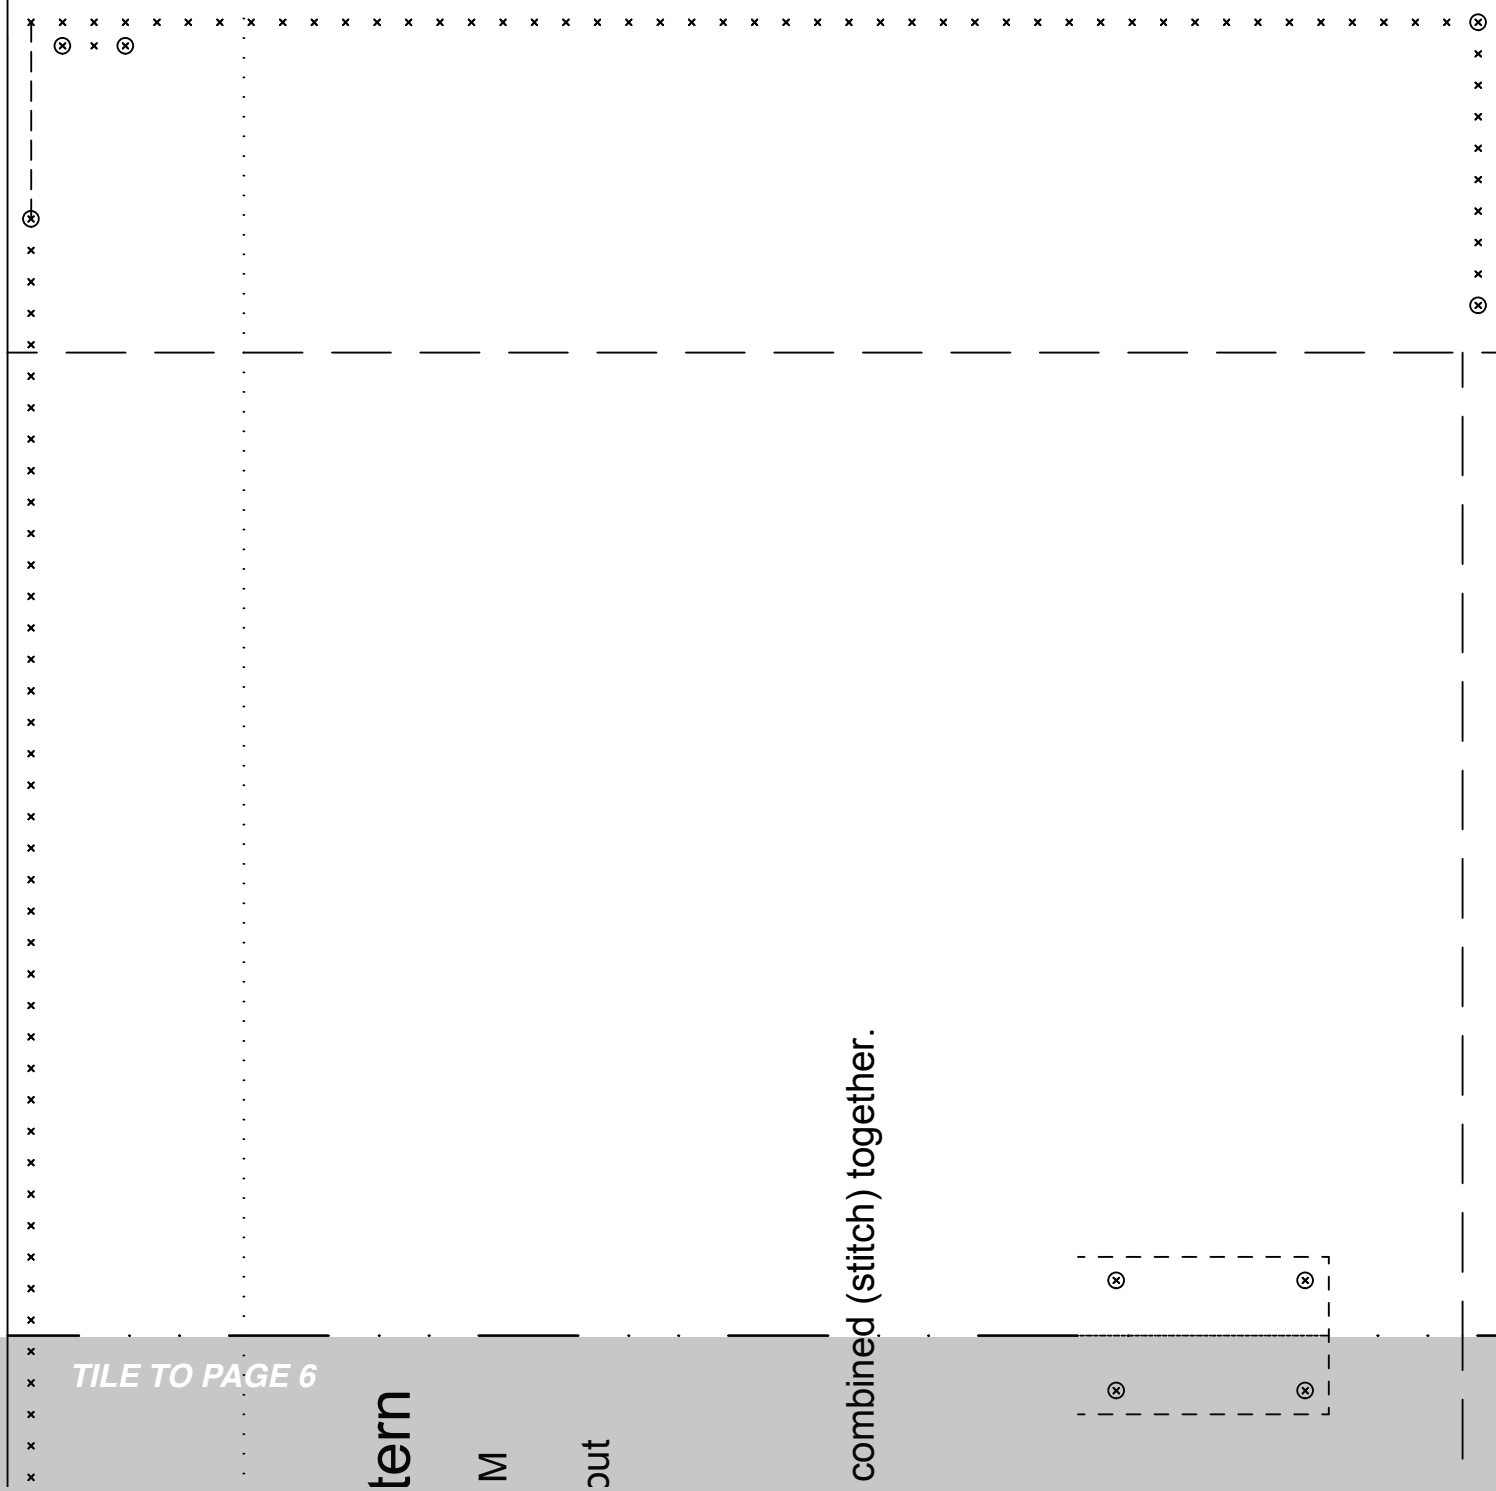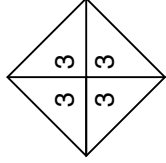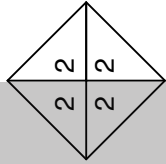




TILE TO PAGE 6



tern

M

cut

     
combined (stitch) together.

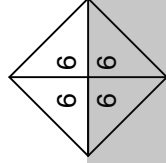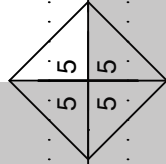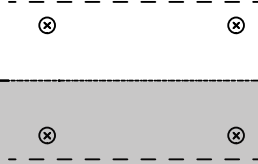

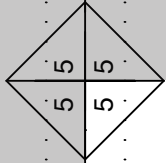
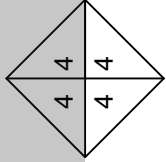



Overlapping area of the gusset. / (bottom, if use 2 pie

 ⊗ ⊗ ⊗ ⊗ ⊗ ⊗ ⊗ ⊗ ⊗ ⊗

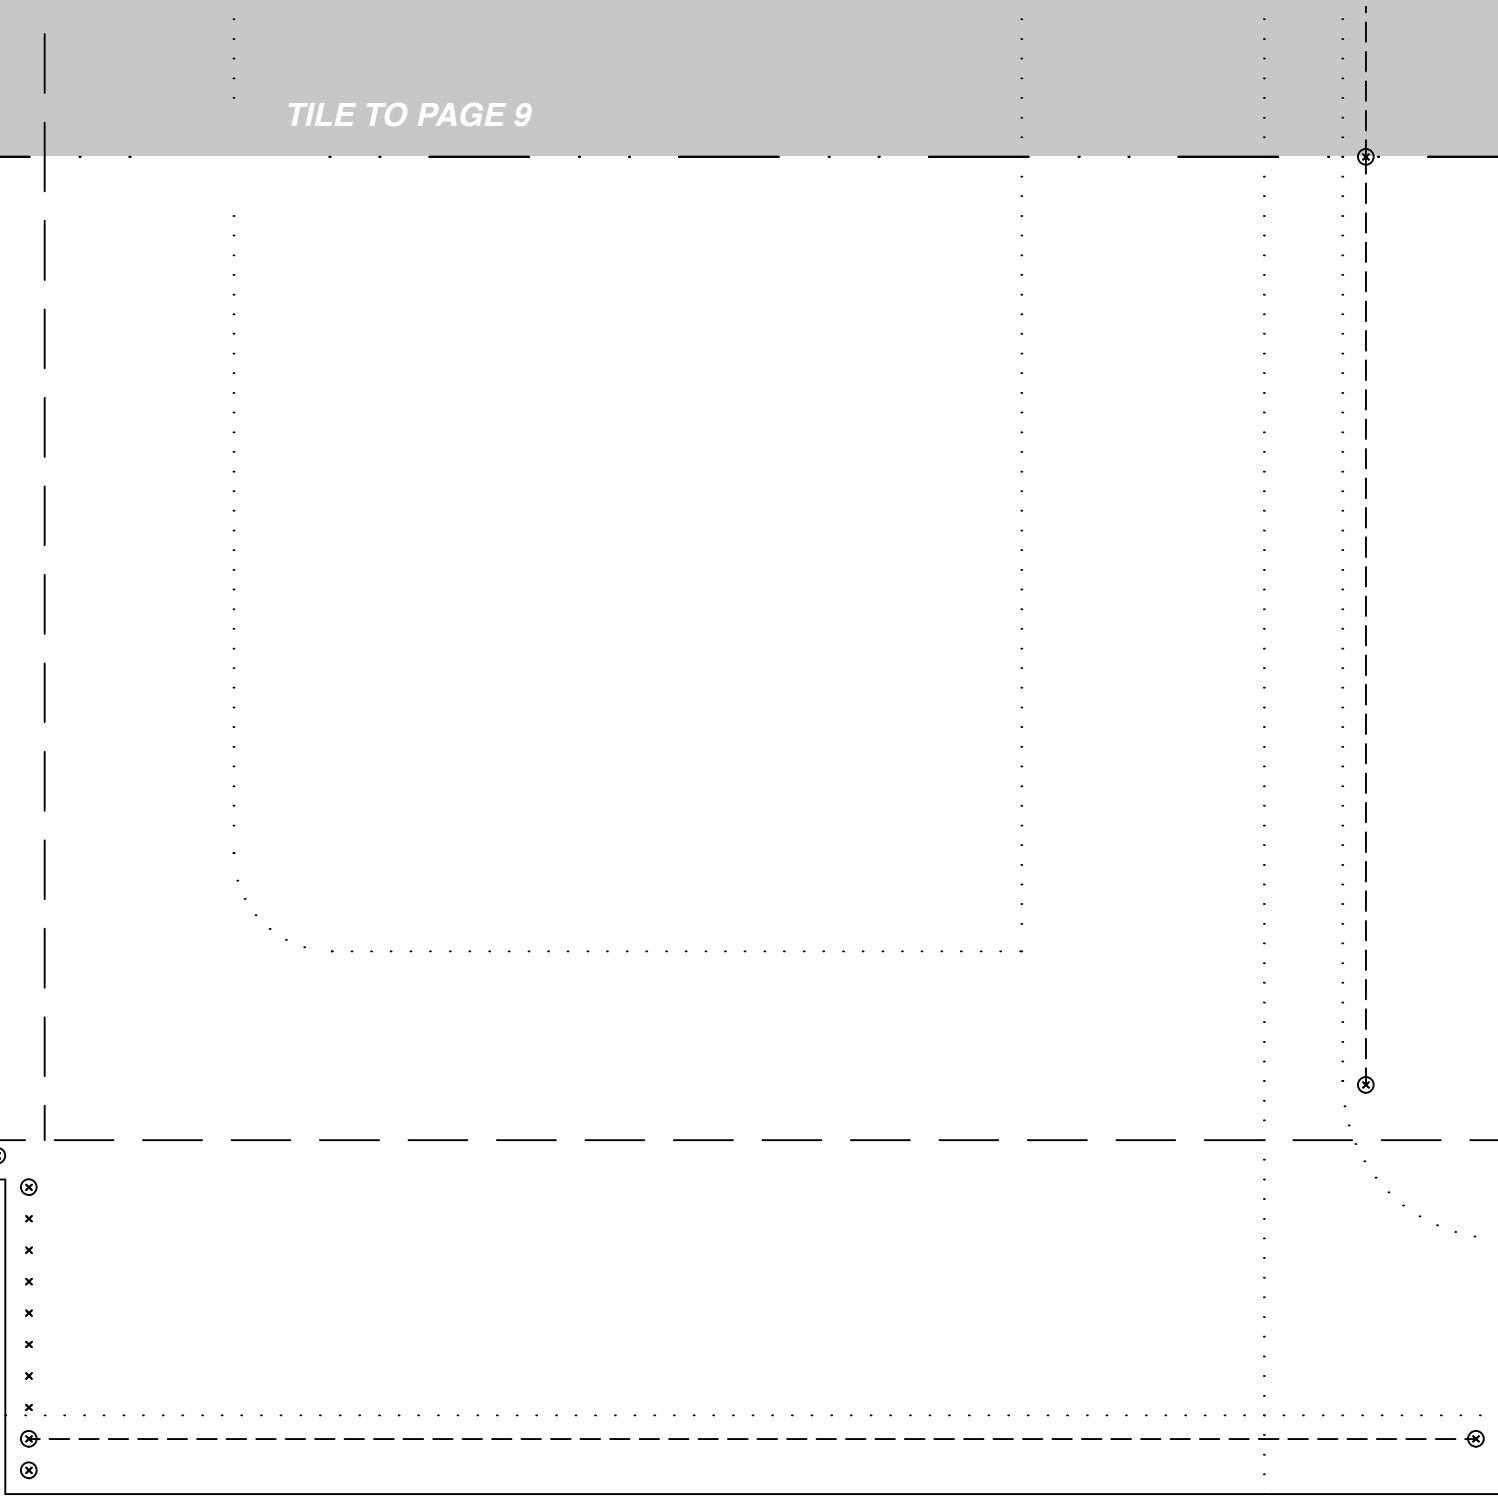


TILE TO PAGE 9

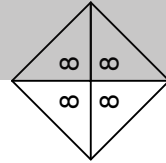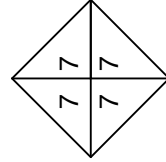  

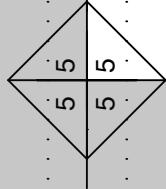 

om, if use 2 pieces of leather)

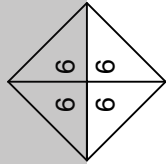 

TILE TO PAGE 8

