





## Kit Pattern Digital Download

This PDF file contains 1 (one) full Kit Pattern. The PDF has been put together to give you options when it comes to printing. Pages and patterns that have a side longer than 11 inches have been provided in two formats:

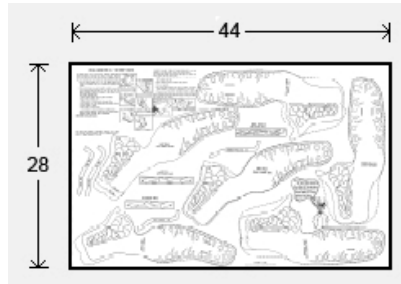

### 1) Full Size

If you would like to have a full size print out, take the full size pages to your local print shop and they can print it for you.

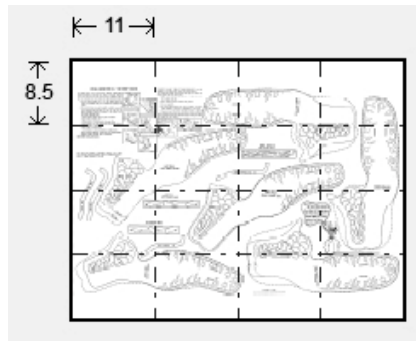


### 2) Tiled

The tiled pages give you the option of printing the larger patterns at home. You print the tiled pages and then assemble them to make the larger patterns.

**These digitized patterns do not include any kit parts that they may mention.**

Please note: When printing on a home printer, use the settings seen on the image to the right in the Page Handling area of the Adobe Reader print dialogue box. If your printer is cutting edges off, set "Page Scaling" to "Shrink to Printable Area". This will, however, decrease the size of the pattern a very small amount.

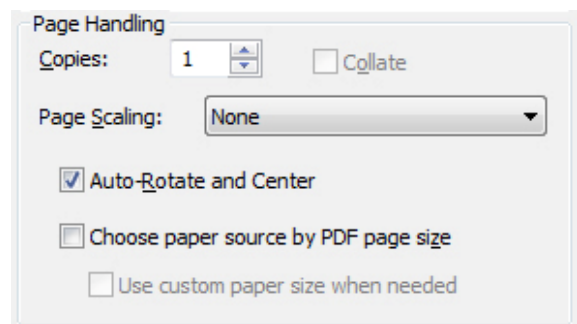

You may take this PDF file to your local print shop to have the full-size pages printed for your own personal use.





TRACING AND  
PHOTO PATTERN  
FOR  
THE "PALM SPRINGS"  
HAND BAG  
  
ASSEMBLY  
INSTRUCTIONS


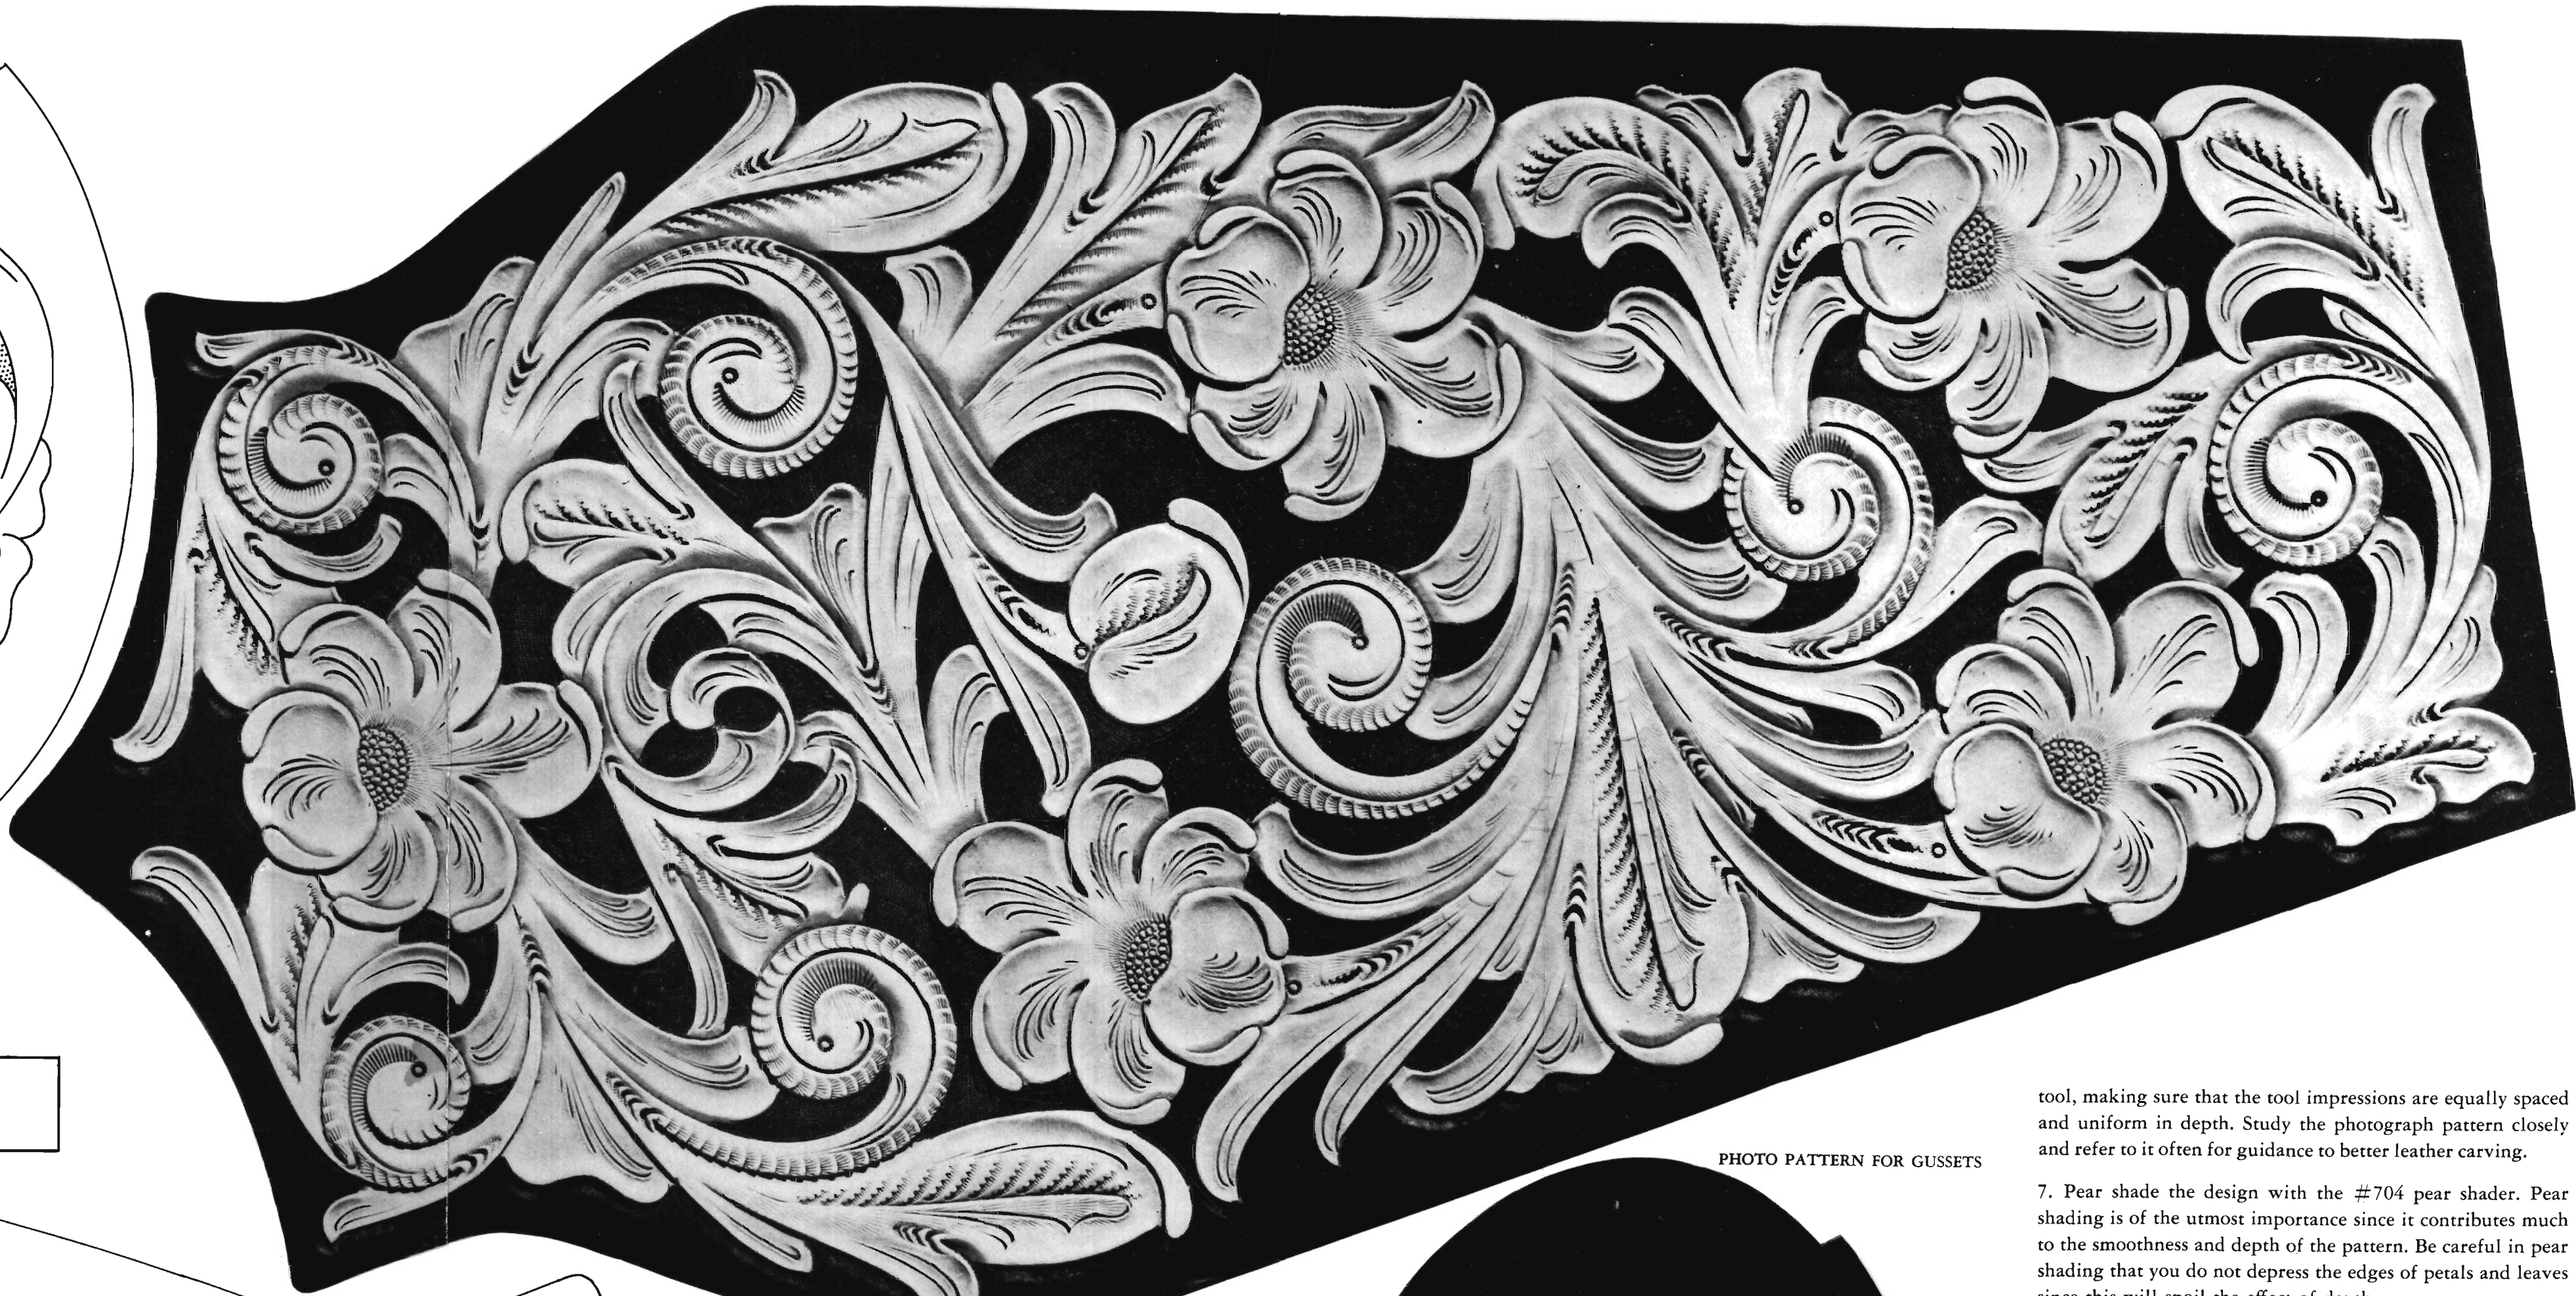


PHOTO PATTERN FOR GUSSETS

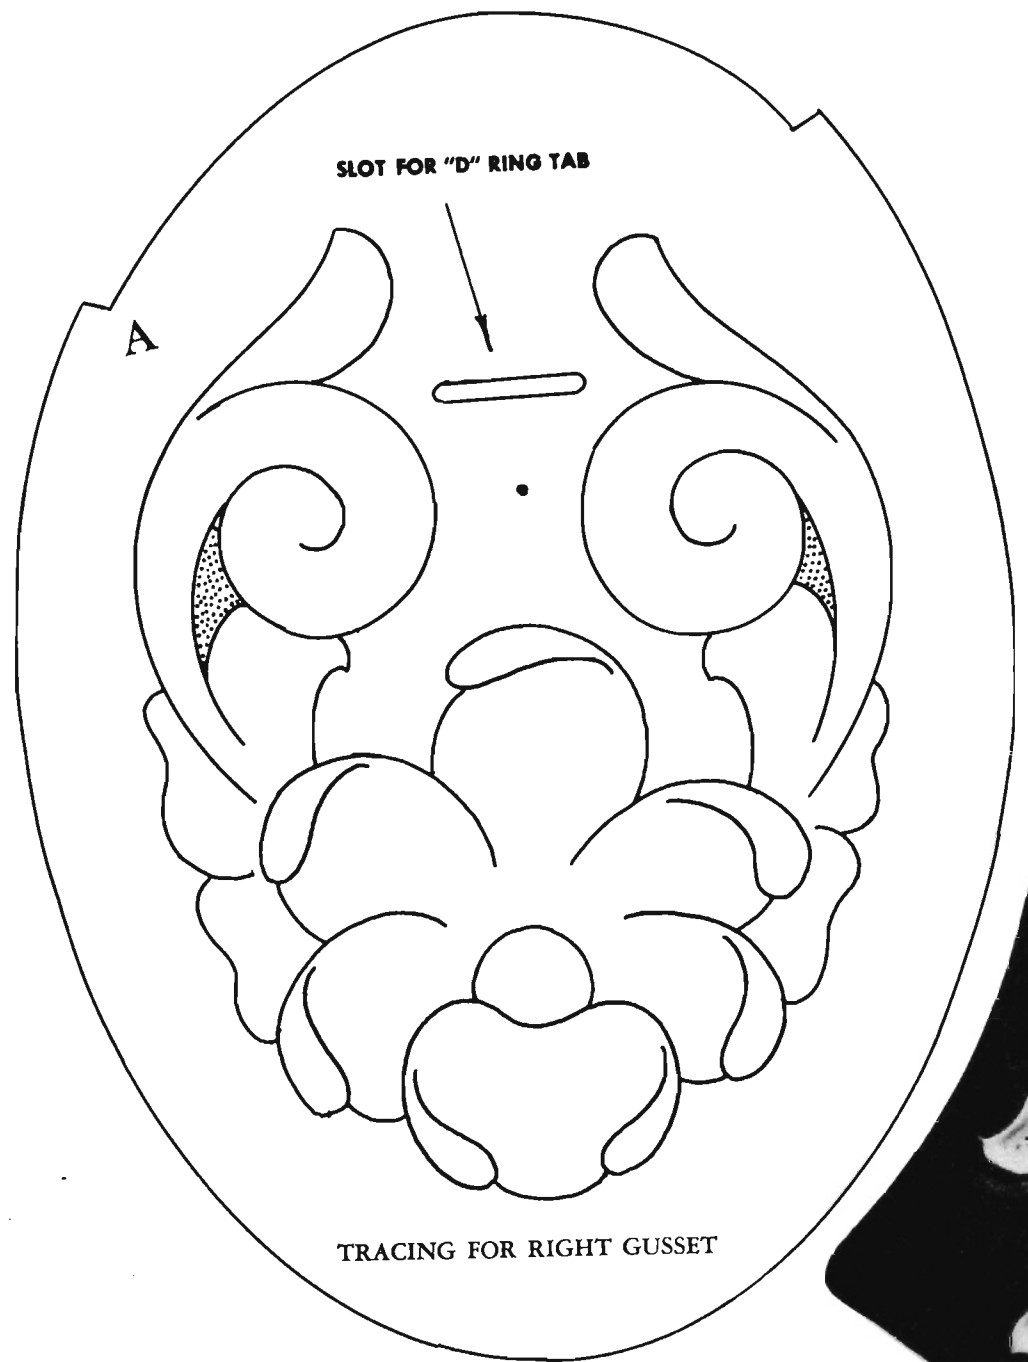

CARVING AND STAMPING  
INSTRUCTIONS  
FOR THE "PALM SPRINGS"

1. Using the tracing pattern as a template, cut the leather for the "PALM SPRINGS" from 6 ounce natural carving leather.
2. Cut out the gussets, both left and right and immerse the leather in luke warm water for a few seconds and place it smooth side up on your work table.
3. Allow the leather to dry until the surface begins to return to its natural color. You are now ready to trace the design.
4. Trace the design on the leather with a ball point stylus. Before tracing be sure that the pattern is accurately centered on the leather. It is a good idea to secure the tracing pattern to the edges of the leather with scotch tape. Before removing the pattern lift one edge of the paper to make sure that all the lines have been traced.
5. Carve the design with the swivel knife, starting with the flowers followed by stems, scrolls and leaves.
6. Camouflaging is next, and in this pattern the #426 cam is best suited to decorate the stems, flower petals, and large leaves. Pick the edges of the scrolls with the #431 camouflage

tool, making sure that the tool impressions are equally spaced and uniform in depth. Study the photograph pattern closely and refer to it often for guidance to better leather carving.

7. Pear shade the design with the #704 pear shader. Pear shading is of the utmost importance since it contributes much to the smoothness and depth of the pattern. Be careful in pear shading that you do not depress the edges of petals and leaves since this will spoil the effect of depth.

8. Beveling is next. For this pattern, the #971 large beveler and the #198 small checked beveler were used. The longer beveler can be used on the straight lines and stems smoothly and rapidly, while the shorter #198 is best suited for the sharp curves on the flower pattern and smaller leaves. Go over the beveling as many times as are necessary to give smooth deep appearance to the carving.


9. Use the #419 checked shell tool to accent the lines which join the flower petals and the small segments with the large leaves. For proper use of this tool refer to the photo pattern and note that only one end of the shell tool is used to deepen these lines, making a smooth impression. In most cases the #710 mule track is stamped at the base of the shell tool. Also observe that the mule track impressions gradually diminish in depth.

10. Vein the leaves with the #412 veiner, tilting the tool so that the impression gradually disappears onto the smooth leather. Keep these impressions evenly spaced. #412 is also used at the tops of the stems.

11. The #454 large camouflage tool is used to form the flower center outline and to form the center line of the scrolls. Stamp the seeds in the flower centers with the #705 seeder, grouping them closely but not overlapping. The #706 seeder is used at the base of the flower and in the center of each scroll.

12. The leather should be almost dry for backgrounding but sufficiently damp that the background tool does not "stick". The #114 fine bar grounder is used on the "PALM SPRINGS" pattern. Be careful not to overlap the tool impressions and try to keep the background uniform in depth.

13. Ornamental cuts are last and very important as you will find by close examination of the pattern. These cuts usually follow the general outline of the petal or leaf being decorated. If the leather is too dry at this point, go over the surface lightly with a damp sponge. You are now ready to proceed with the assembly of the bag which is explained in detail in "Assembly Instructions".

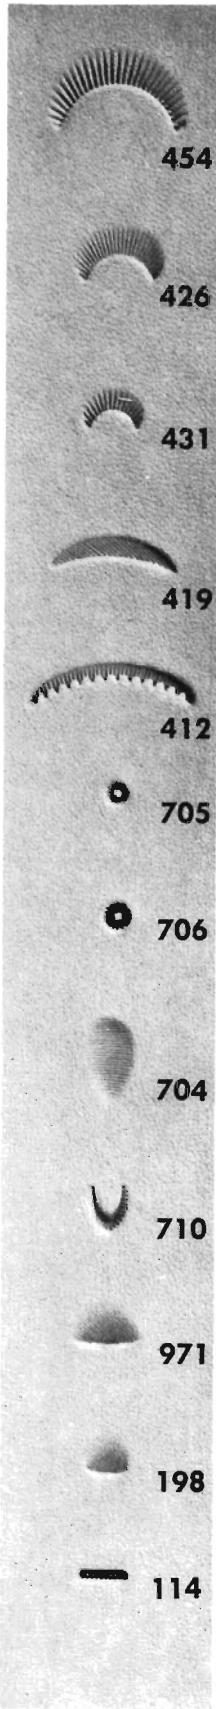




Stylecraft





TRACING AND  
PHOTO PATTERN  
FOR  
THE "PALM SPRINGS"  
HAND BAG

ASSEMBLY  
INSTRUCTIONS

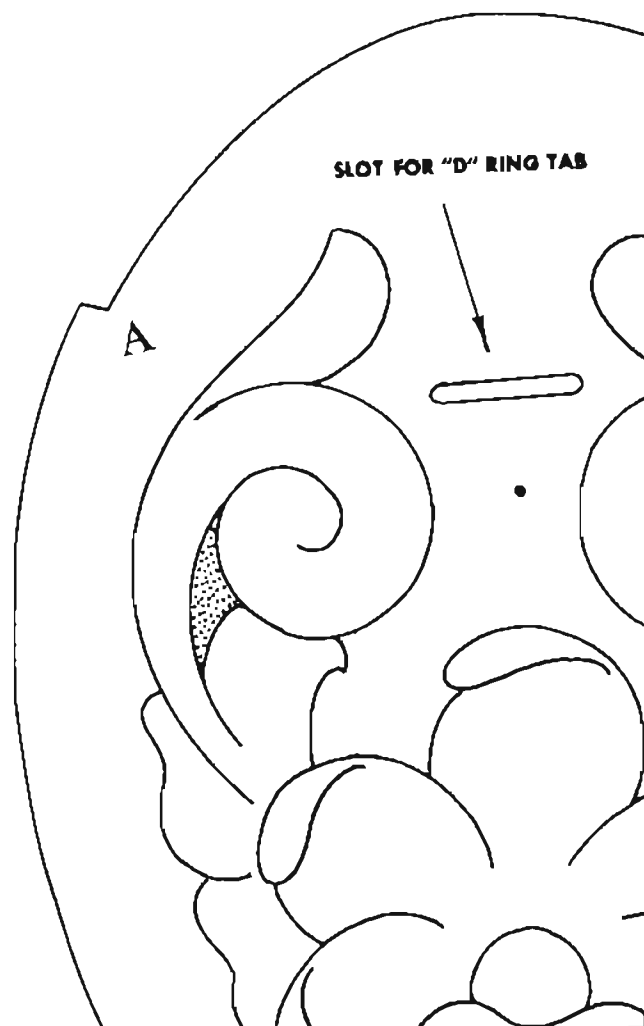








# ASSEMBLY INSTRUCTIONS

1. After carving is completed, clean if necessary and apply desired finish or dressing.
2. Skive the purse leather and the gussets along the edges where they will be joined. (This is important for neat and simple construction — and makes punching easier.) The edges should be skived  $\frac{3}{8}$ " back from the edge and about  $\frac{1}{2}$  original thickness.
3. Install the turn lock fastener on the front panel of the bag in the position indicated on the pattern below. Remember: the grommet pieces of the fastener are not installed in the flap until after the lining is cemented in place and the purse is complete.
4. Cut the leather tabs for the "D" rings  $\frac{3}{4}$ " by 3" and crease the edges. Cut the slots with a  $\frac{1}{4}$ " bag punch as indicated on the gusset pattern and install the tabs with "D" rings. Secure the tabs in place with speedy rivets or lacing.
5. Next construct the lining from the desired material and install the pockets and stitch. Be sure to cut the lining leather  $\frac{1}{4}$ " larger than the purse leather on all sides.  
Apply cement to the flesh side of the purse and the back of the lining and allow to dry until tacky.
6. Carefully align the edges of the handbag leather and the lining and press firmly together, taking care that the edges are firmly cemented and that there are no wrinkles.
7. Install the gusset lining using the same method as above.
8. Trim off excess lining evenly at the edges.
9. If a smooth lining has been used, scuff the edges of the gussets and the bag where they will join. Sandpaper or the edge of a knife may be used for this purpose.

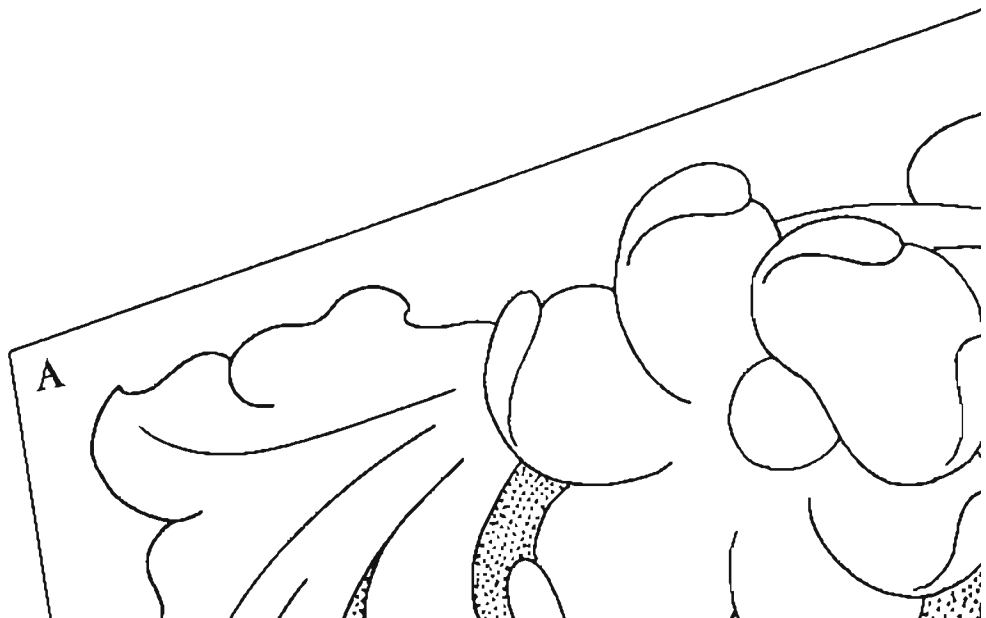




10. Next, scribe a line around the outside edge of the handbag with a compass divider  $\frac{1}{8}$ " from the edge. This line will act as a guide for the lacing slits.

11. Select a thonging chisel or punch to suit the size and type of lacing desired, and punch the holes around the entire edge of the leather, keeping in mind that neatness and evenness are the paramount factors.

12. Apply cement to the scuffed edges of the gussets and the bag and allow to dry. Then, starting at points "A" on the bag and points "A" on the gussets, press the edges together until the gussets are completely in place. Using the same punch that was used to punch the slits in the outside of the bag, punch the holes through the gussets. The previously punched holes will act as a guide. Punch the holes across the ends of the gussets.

13. Lace the bag completely.


14. Construct the strap desired according to the diagram on page 4. Either the short strap or adjustable shoulder strap may be used with any of the STYLECRAFT handbags. Apply the same dressing to the strap that was used on the bag. Keep in mind throughout the entire construction of the purse that neatness and finished appearance are of prime importance.

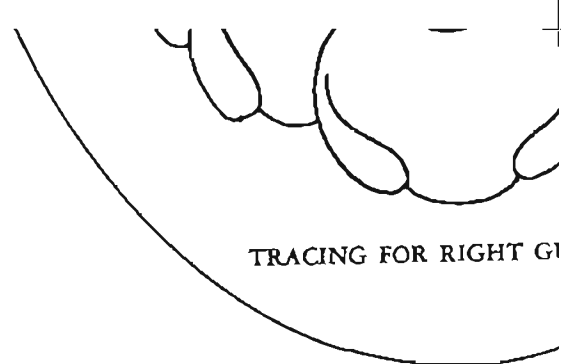

TRACING FOR RIGHT G



TABS FOR "D"

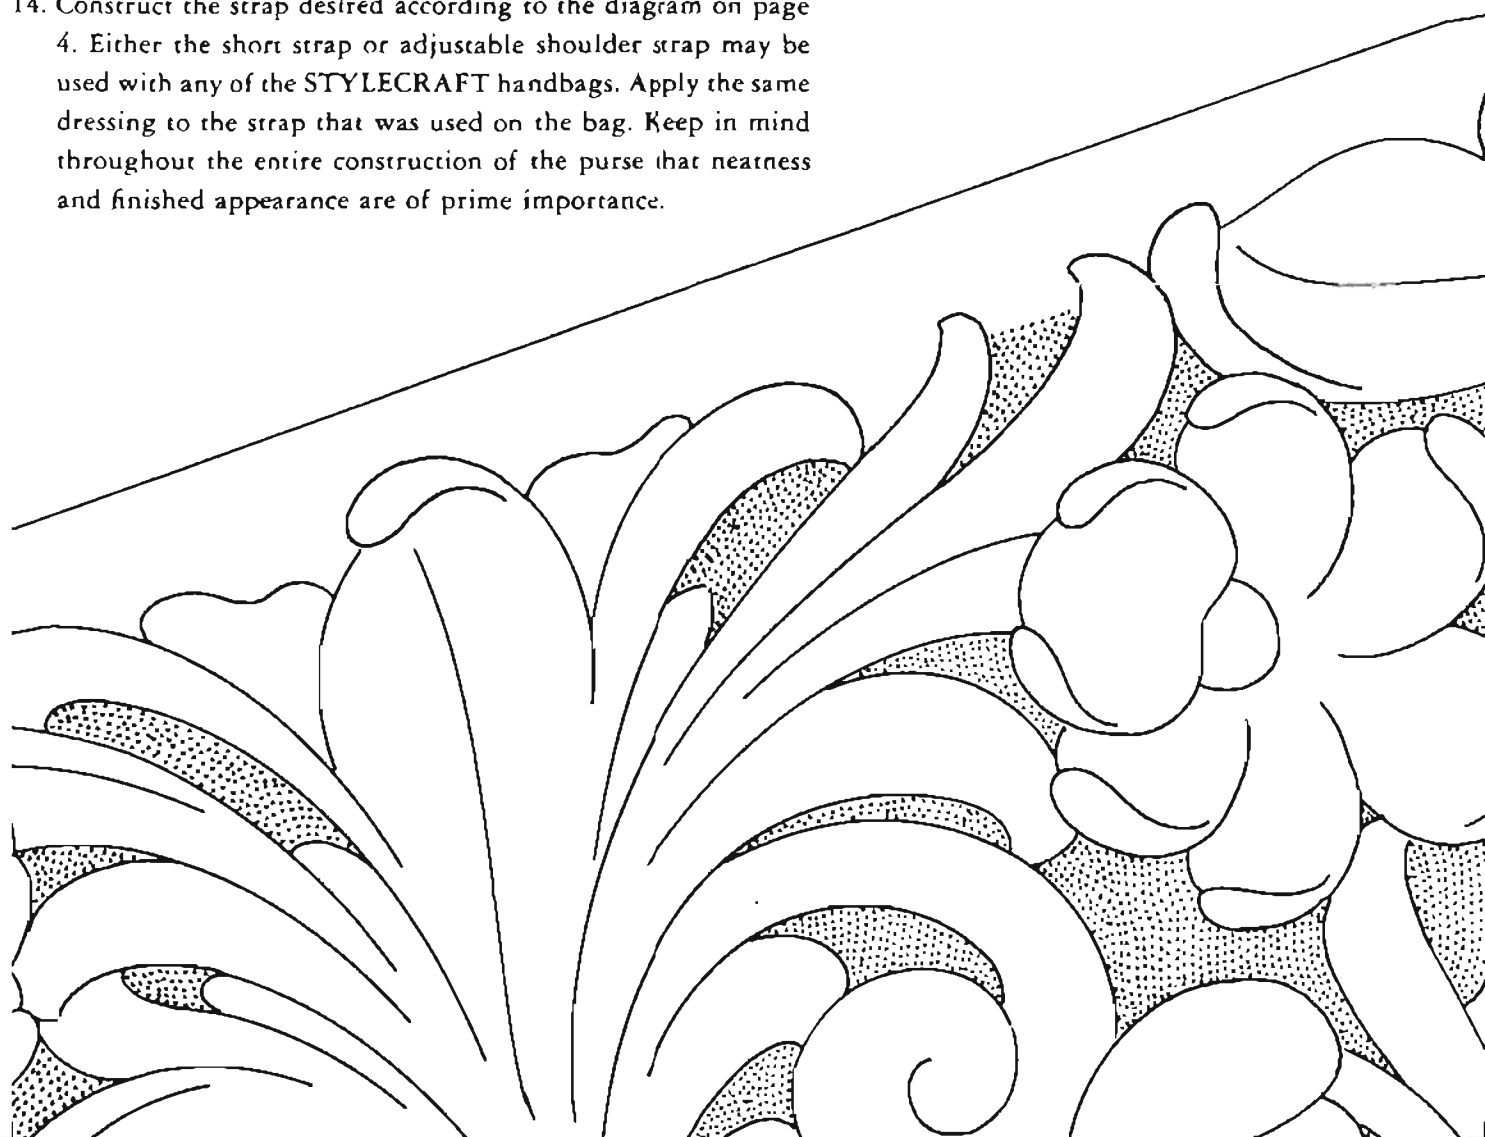


USSET

RINGS






PHOTO PATI

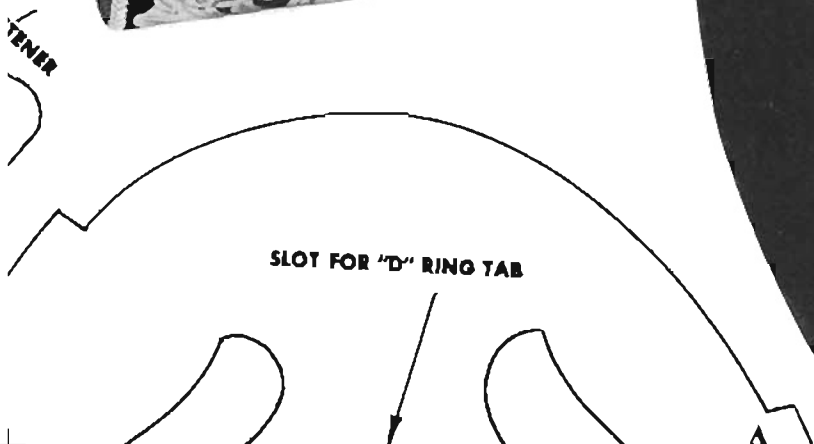



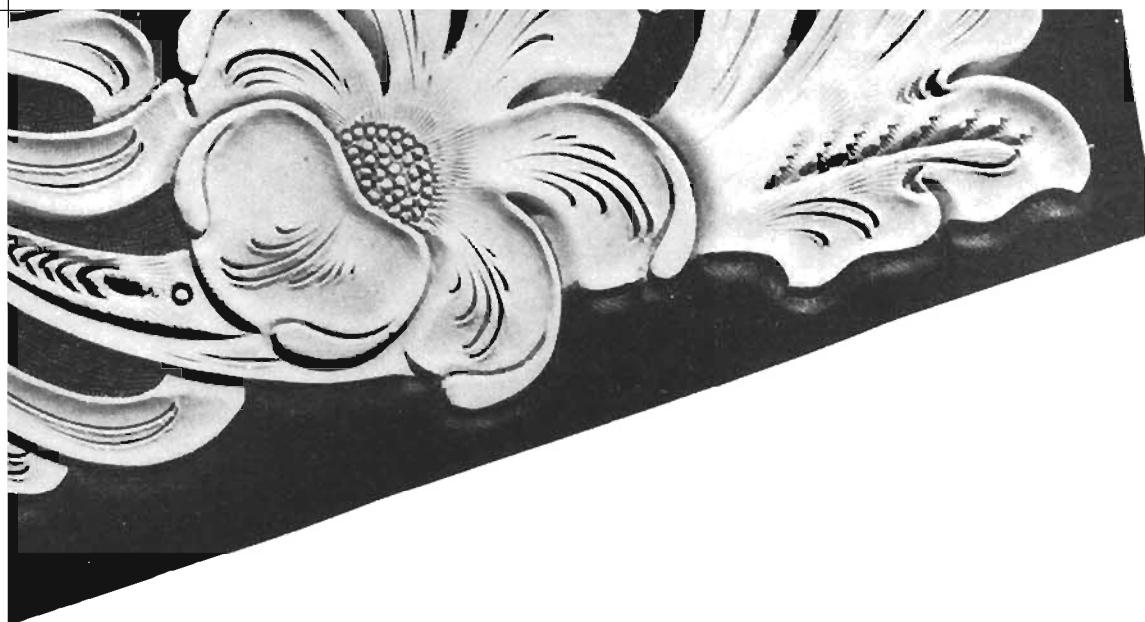

## PATTERN FOR GUSSETS




tool, making sure that the tool impressions are equally spaced and uniform in depth. Study the photograph pattern closely and refer to it often for guidance to better leather carving.

7. Pear shade the design with the #704 pear shader. Pear shading is of the utmost importance since it contributes much to the smoothness and depth of the pattern. Be careful in pear shading that you do not depress the edges of petals and leaves since this will spoil the effect of depth.


8. Beveling is next. For this pattern, the #971 large beveler and the #198 small checked beveler were used. The longer beveler can be used on the straight lines and stems smoothly and rapidly, while the shorter #198 is best suited for the sharp curves on the flower pattern and smaller leaves. Go over the beveling as many times as are necessary to give smooth deep appearance to the carving.


9. Use the #419 checked shell tool to accent the lines which join the flower petals and the small segments with the large leaves. For proper use of this tool refer to the photo pattern and note that only one end of the shell tool is used to deepen these lines, making a smooth impression. In most cases the #710 mule track is stamped at the base of the shell tool. Also observe that the mule track impressions gradually diminish in depth.

10. Vein the leaves with the #412 veiner, tilting the tool so that the impression gradually disappears onto the smooth leather. Keep these impressions evenly

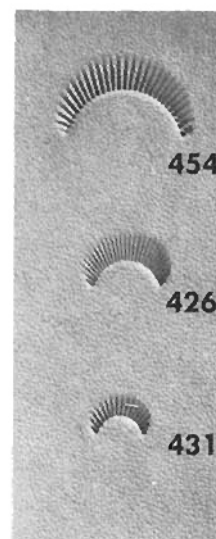



LOCATION OF TURN LOCK FASTENER

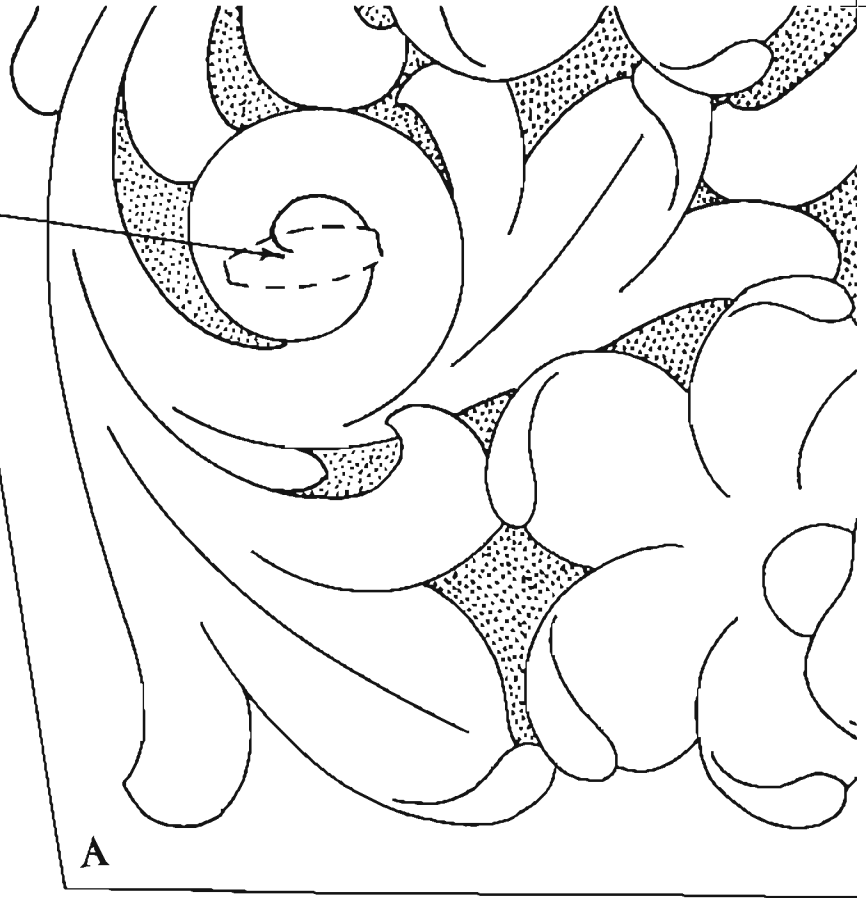

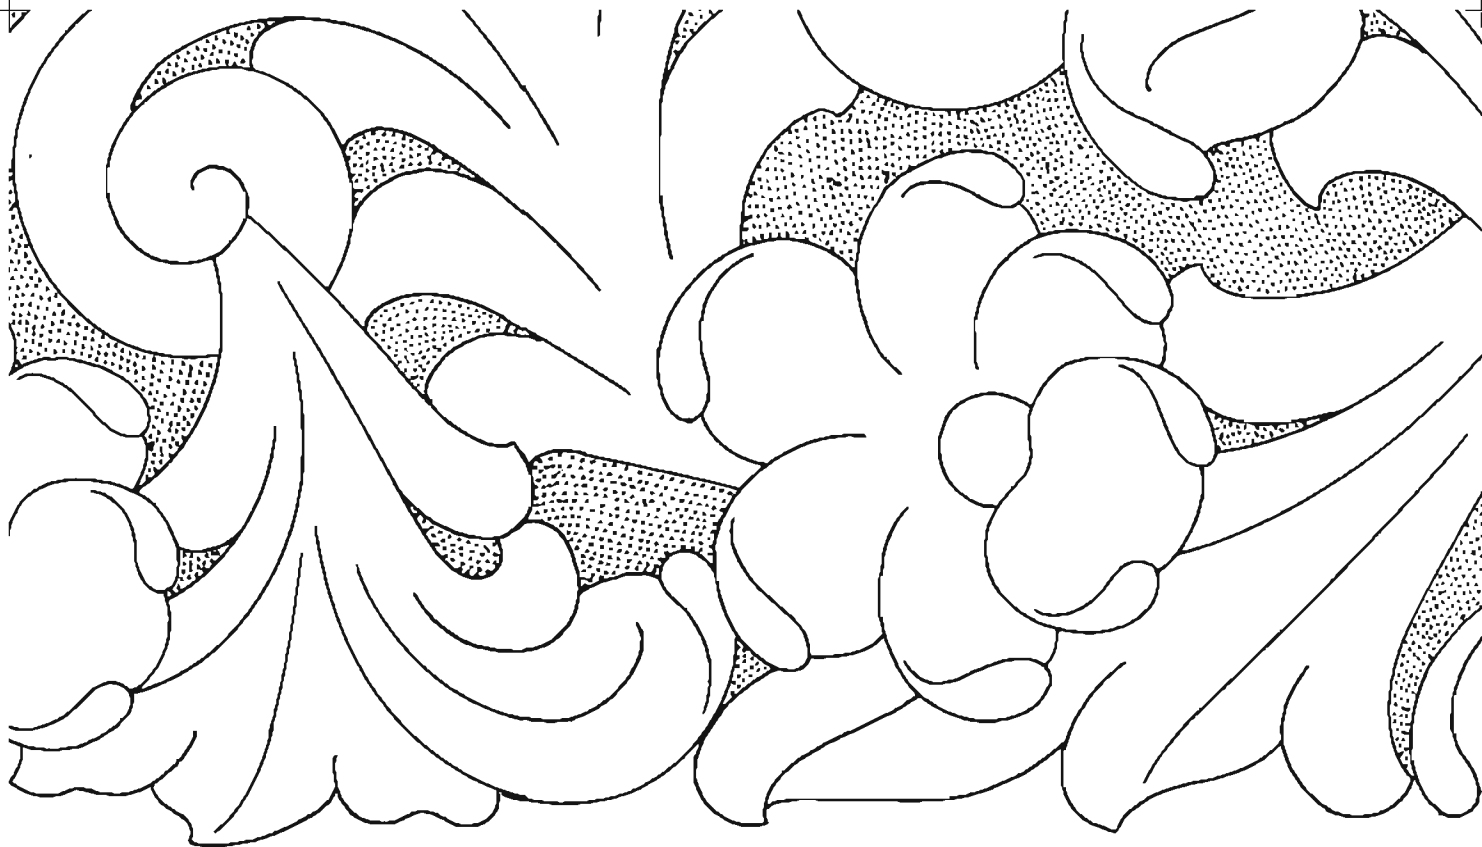



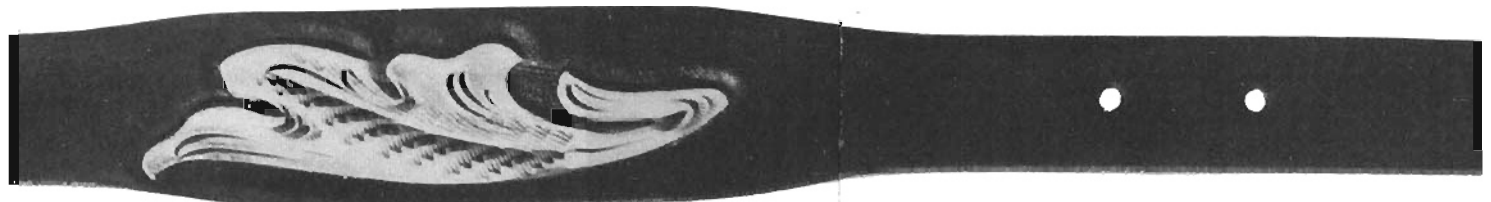

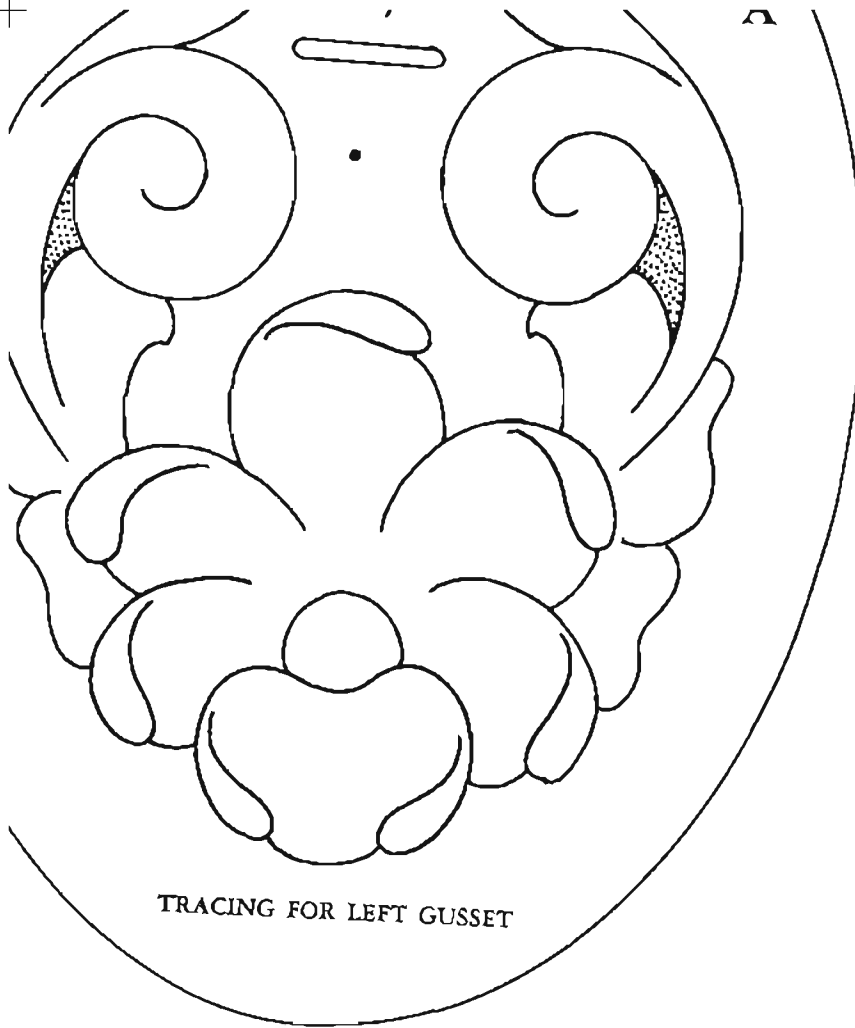

## CARVING AND STAMP INSTRUCTIONS FOR THE "PALM SPRINGS"

1. Using the tracing pattern as a template, cut out the "PALM SPRINGS" from 6 ounce natural leather.
2. Cut out the gussets, both left and right, and soak the leather in luke warm water for a few seconds to smooth side up on your work table.
3. Allow the leather to dry until the surface returns to its natural color. You are now ready to carve.
4. Trace the design on the leather with a sharp pencil. Before tracing be sure that the pattern is aligned correctly on the leather. It is a good idea to secure the leather to the edges of the leather with scotch tape. After the pattern is lifted one edge of the paper to make sure the lines have been traced.
5. Carve the design with the swivel knife, starting with the flowers followed by stems, scrolls and leaves.
6. Camouflaging is next, and in this pattern the leather is best suited to decorate the stems, flower centers and leaves. Pink the edges of the scrolls with the swivel knife.

Not to be reproduced in any form except by express written permission of the author.

# PING NGS"

cut the leather for  
al carving leather.

and immerse the  
onds and place it

e begins to return  
race the design.

ball point stylus.  
xcurately centered  
ie tracing pattern  
Before removing  
e sure that all the

starting with the  
i.

n the #426 cam  
petals, and large  
#431 camouflage

spaced. #412 is also used at the tops of  
the stems.

11. The #454 large camouflage tool is  
used to form the flower center outline  
and to form the center line of the scrolls.  
Stamp the seeds in the flower centers  
with the #705 seeder, grouping them  
closely but not overlapping. The #706  
seeder is used at the base of the flower  
and in the center of each scroll.

12. The leather should be almost dry  
for backgrounding but sufficiently  
damp that the background tool does not  
"stick". The #114 fine bar grounder is  
used on the "PALM SPRINGS" pattern.  
Be careful not to overlap the tool im-  
pressions and try to keep the background  
uniform in depth.

13. Ornamental cuts are last and very  
important as you will find by close  
examination of the pattern. These cuts  
usually follow the general outline of the  
petal or leaf being decorated. If the  
leather is too dry at this point, go over  
the surface lightly with a damp sponge.  
You are now ready to proceed with the  
assembly of the bag which is explained  
in detail in "Assembly Instructions".

