



Crossbody bag Instruction

Craftsman Gus

Material requirement:

Requirements:

- 2 D-ring (size: 2 cm.)
- 4 rectangle ring (size: 2 cm.)
- 4 sets of rivets 1 cm. diameter
- 2 zipper head
- 2 zipper pull
- No#3 zipper (aprox 18 cm./ 7 inches)
- No#5 zipper (aprox. 41 cm./ 16 inches)
- 2 pieces of cotton or hemp or leather robe for handle stuffing (25 cm./ 10 inches)
- 1.8 mm thickness leather is recommended for this project

See the YouTube link below for the making of this speedy bag:

<http://bit.ly/2xaOUjb>


***NOTE: this is an instruction file only. Please refer to the file name "Pattern_Speedypdf" for printing the pattern pieces



Boston/ Speedy Instruction

CraftsmanGus


1.

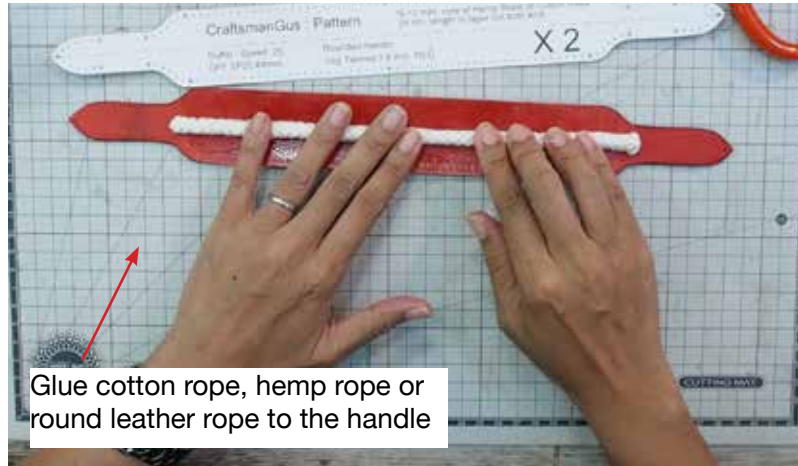

Glue cotton rope, hemp rope or round leather rope to the handle




Cut the rope in slope at both ends

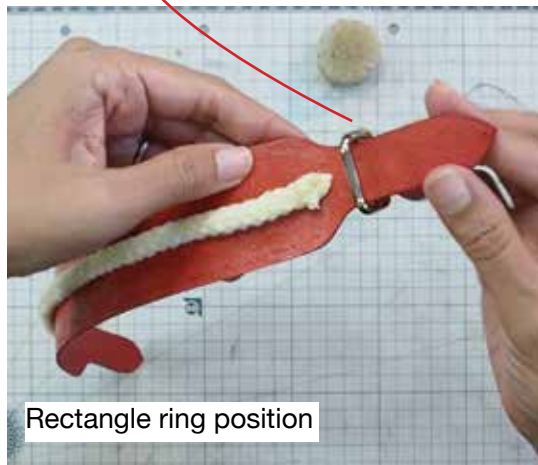

Rectangle ring position



See red dots above as guide on where to start/ end stitches of the rectangle ring

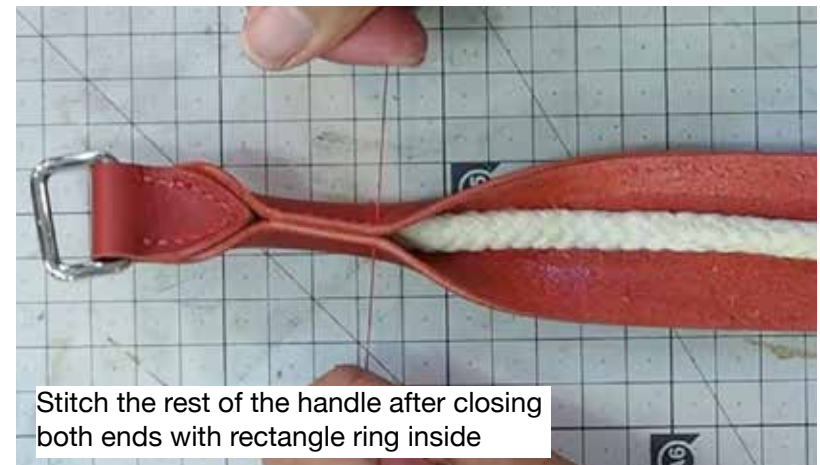


Stitch the rest of the handle after closing both ends with rectangle ring inside




Boston/ Speedy Instruction

CraftsmanGus

2.

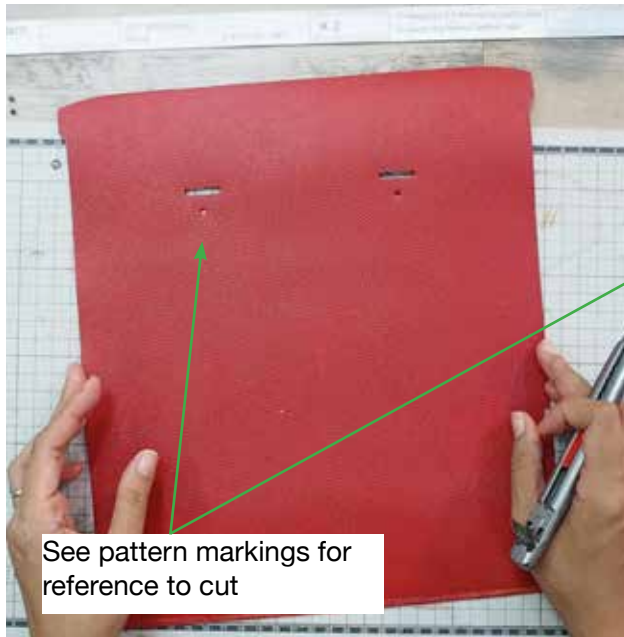

See pattern markings for reference to cut

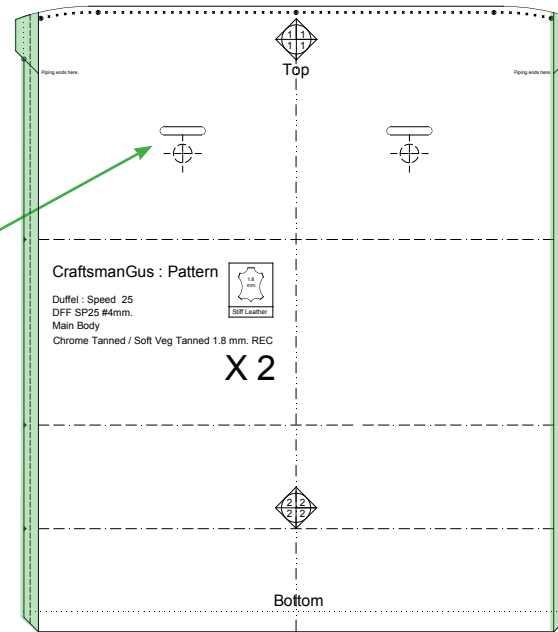


3.



Stitch the bottom joiner to the main body

skive the green highlighted area at 1 cm.

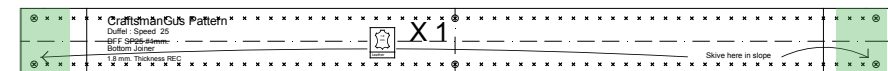





Boston/ Speedy Instruction

Craftsman Gus

4.

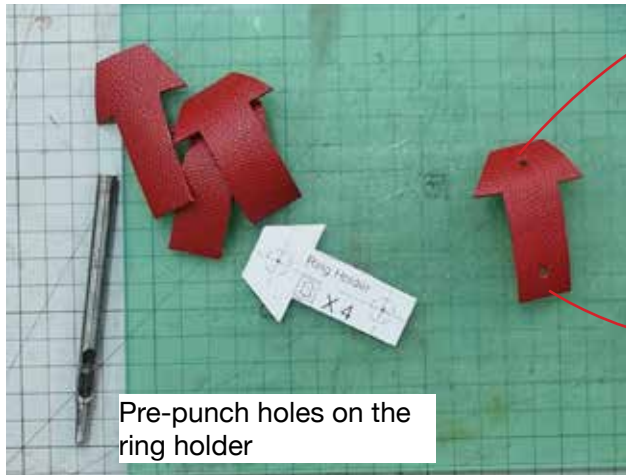

Pre-punch holes on the
ring holder

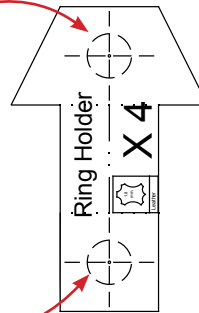

5.



Slide the wider part of the ring holder
inside the main body first



Install the rivets







Boston/ Speedy Instruction

CraftsmanGus

6.

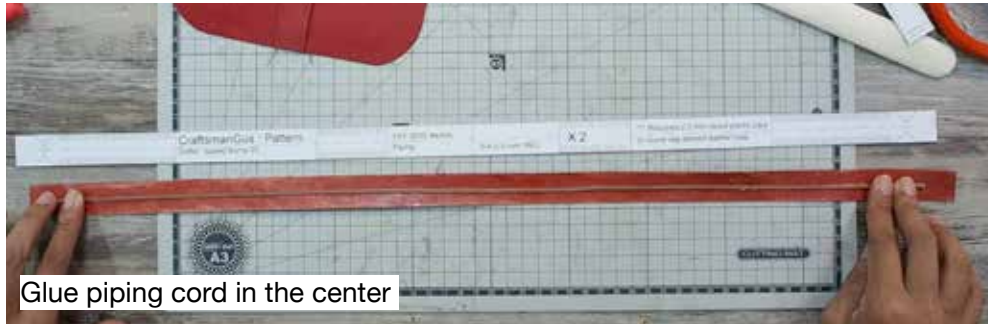


Glue piping cord in the center

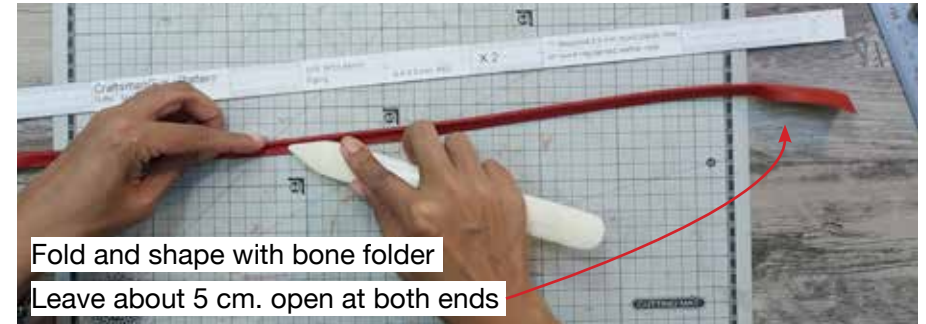


Fold and shape with bone folder

Leave about 5 cm. open at both ends

7.

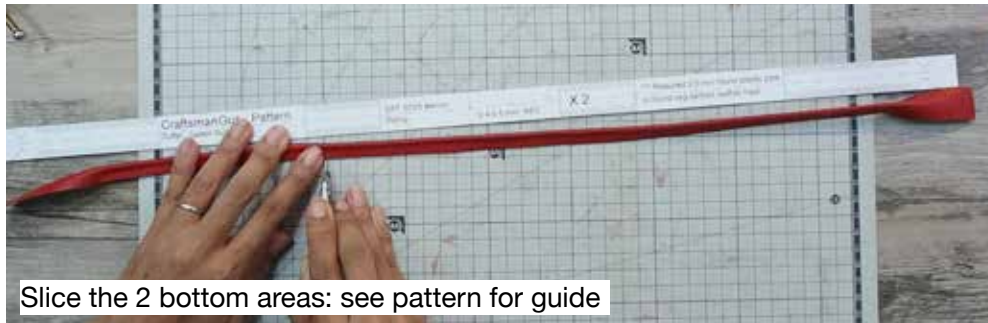

Slice the 2 bottom areas: see pattern for guide

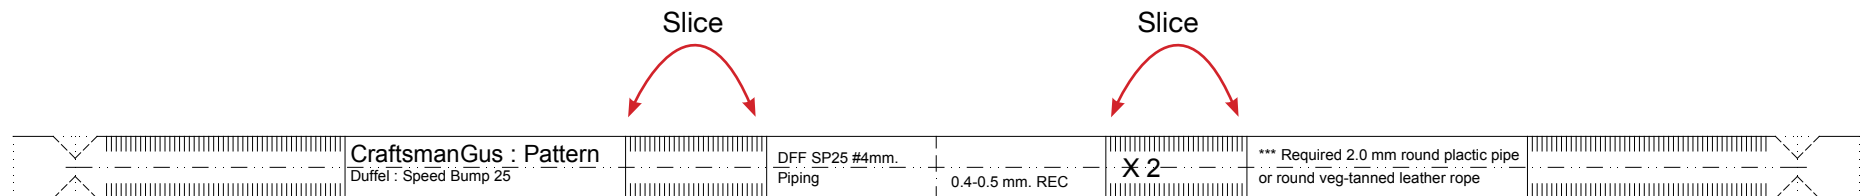



Boston/ Speedy Instruction

CraftsmanGus

8.



Attach the D-ring holder to the side gusset



Slide in the D-ring and stitch

9.




Glue the piping to the side gusset



Slice the top curve area



Cut off the extra piping cord where the piping will curve out

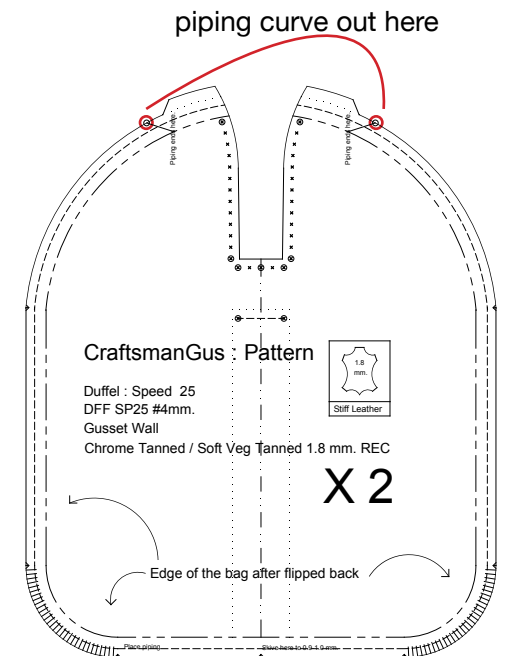



Boston/ Speedy
Instruction

Craftsman Gus

10.



Cut a wide triangle where piping will curve out



11.



Glue and stitch both side gussets to the main body





Boston/ Speedy Instruction

CraftsmanGus




12.



13.



14.

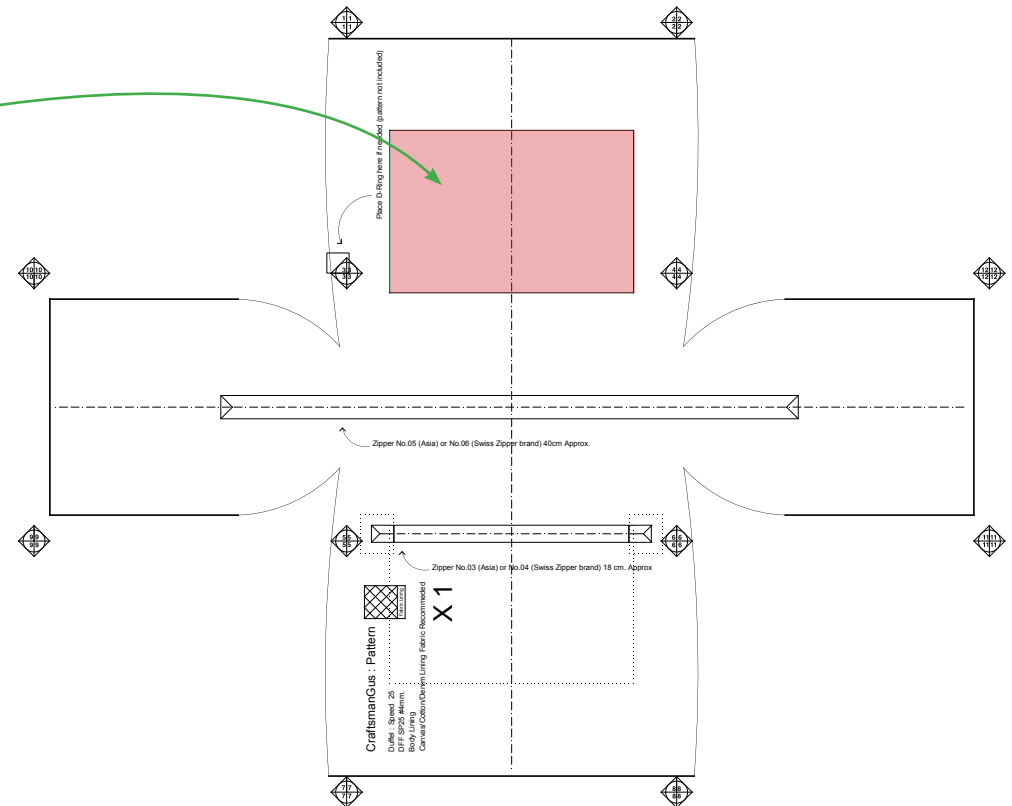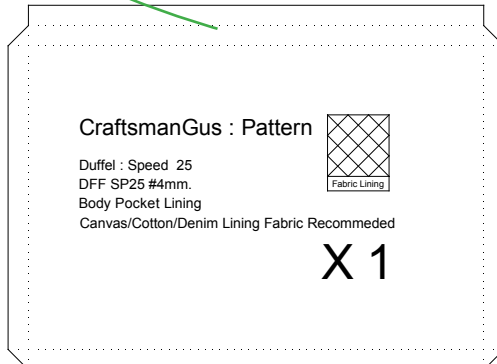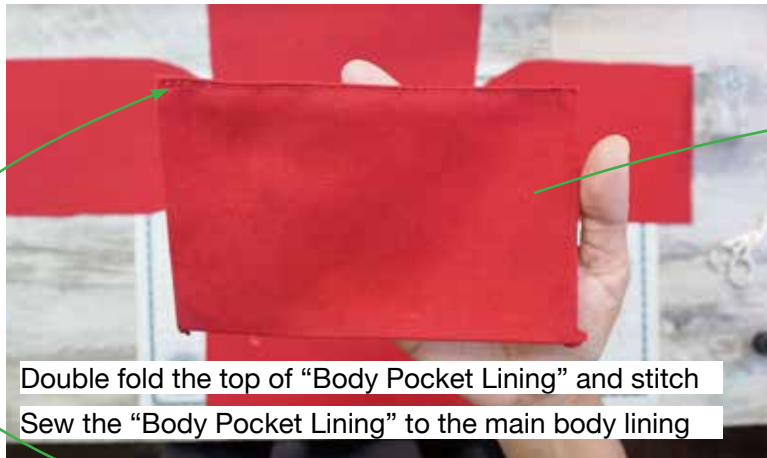




Boston/ Speedy Instruction

CraftsmanGus


15.




Sew zip stopper to #3 zipper

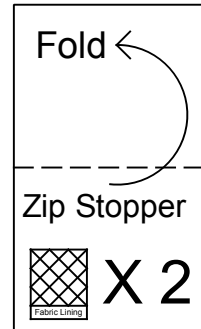

16.

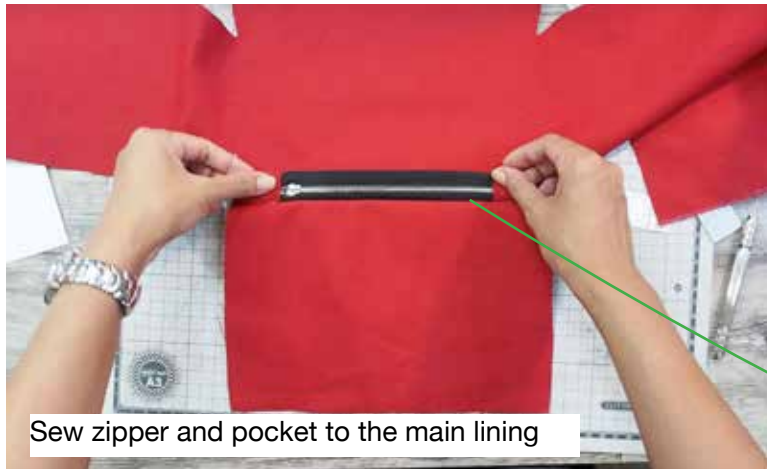

Sew zipper and pocket to the main lining

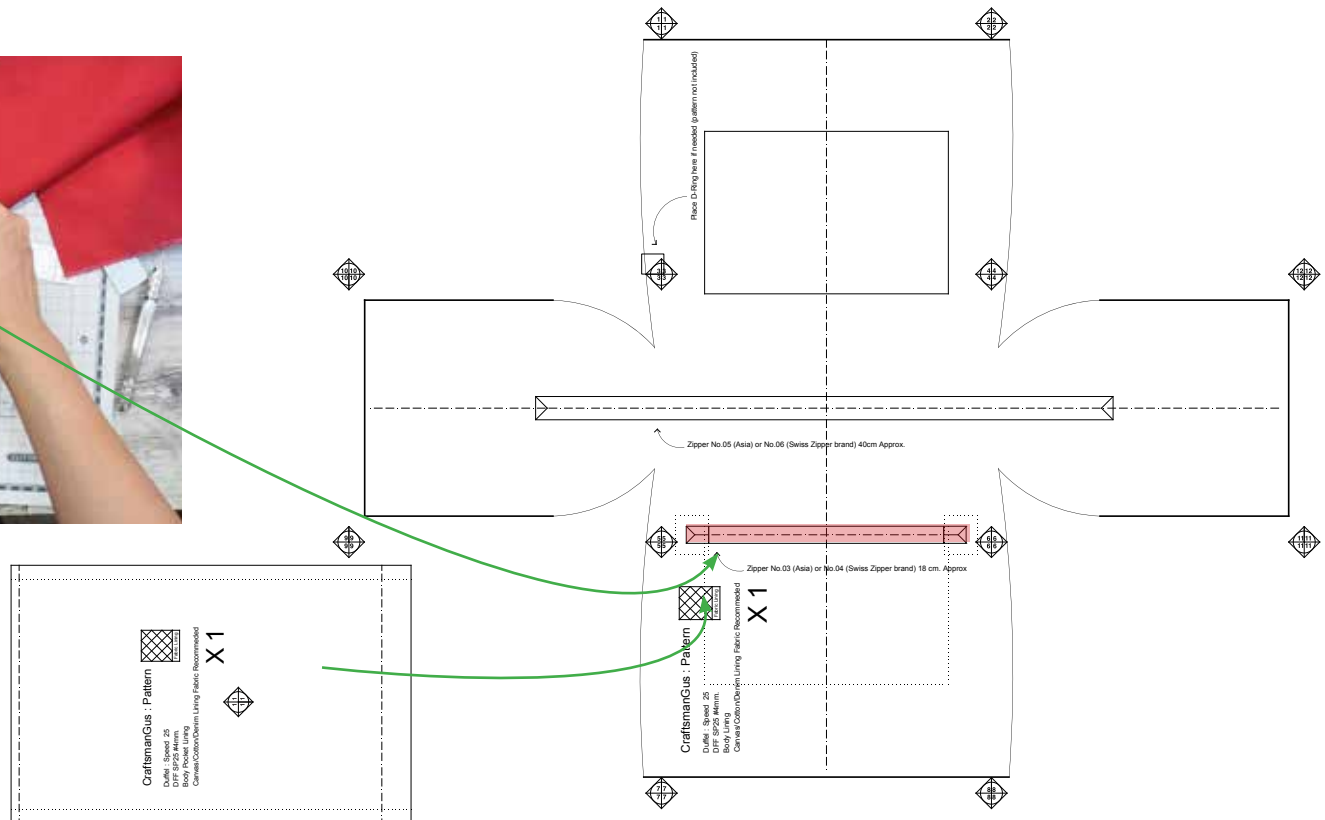




Boston/ Speedy Instruction

Craftsman Gus

17.

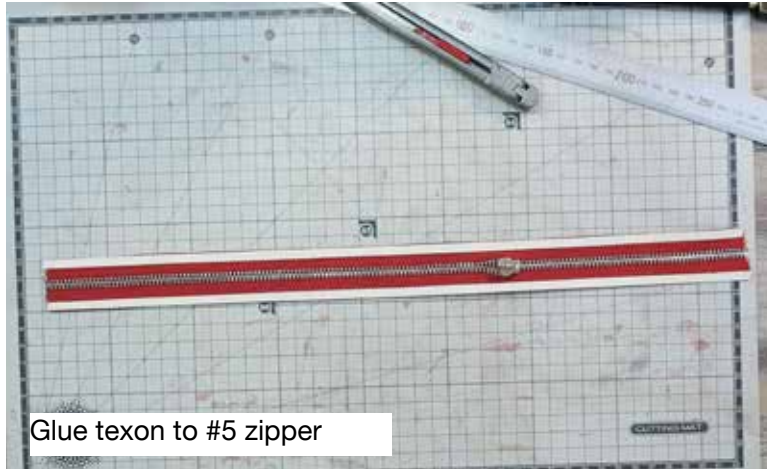

Glue texon to #5 zipper

18.



Make a slit and attach the #5 zipper to the lining



Make sure the zipper head is facing the right direction



19.



20.



21.





22.

