# CREATIVE AWL leather patterns

# TOOLS' BAG

PREPARED BY:

Patryk Ku, www.CreativeAwl.com

## LET'S GO:



#### PRINT THE PATTERN

- -Open your pattern in Adobe Acrobat Reader. Set up options of your printer on A4 paper with 0 margins.
- -Every page has a measure check does it fit.
- Every printed page MUST HAVE a border around! If does'nt move paper left/ right and print again



#### **FOLLOW VIDEO INSTRUCTIONS**

Video tutorial: https://youtu.be/lizKsuVEzdE Cutting patterns: https://youtu.be/2TNUI\_Tlk64



## GIVE A SMILE TO OTHER PEOPLE!

Give a ready product to you family or freind. Give them a smile :)))

04

Also Check www.CreativeAwl.com for more patterns

#### JOIN OUR FB GROUP

Go there to share your work. Also get more DIY&ideas. We will support you & answer all questions.

https://www.facebook.com/groups/CreativeAwIPatterns

## YOU NEED

#### **MATERIALS**

- about 1,1 square meter of leather
- Waxed thread (preferable 0,8mm) 0,8-1 mm)
- 6 x 25 mm d-rings
- 7 x ball studs 5mm
- 2 snaps
- zipper
- some rivets

# TOOLS

- sharp knife
- 1,2-1,5mm hole puncher or pricking irons or awl
- hammer
- 2 needles
- paper tape
- a home printer



SHARE YOUR WORK


https://www.facebook.com/groups/CreativeAwIPatterns


If you got ANY problem, - don't be shy to ask directly on Etsy or facebook

### Toolbag:


#### pages 1 - 34


- -The number in the circle shows which holes are to be connected. Example: ①
- -Numbers 1, 2, 3 (...) without a circle indicate where the piece lies in the overview drawing.

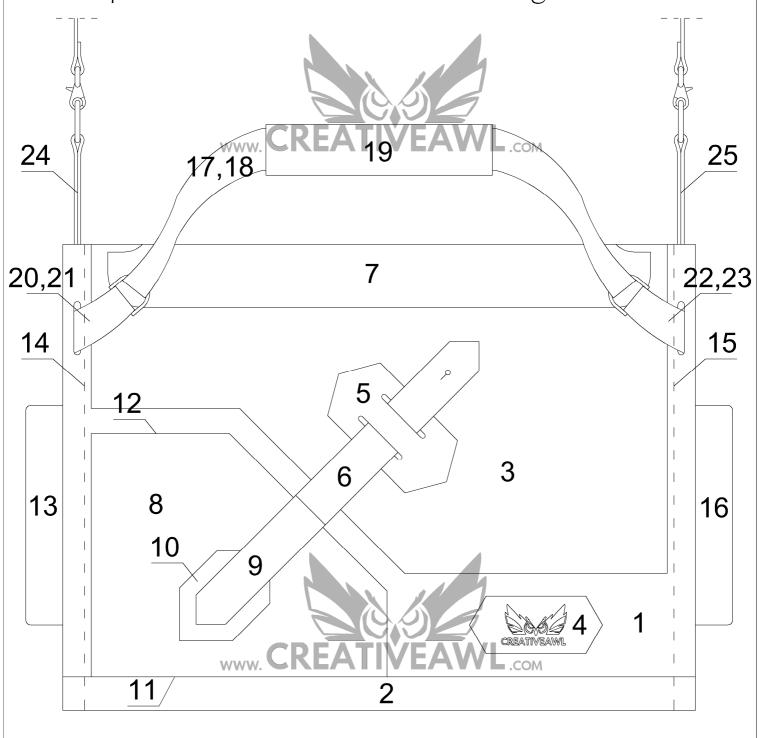


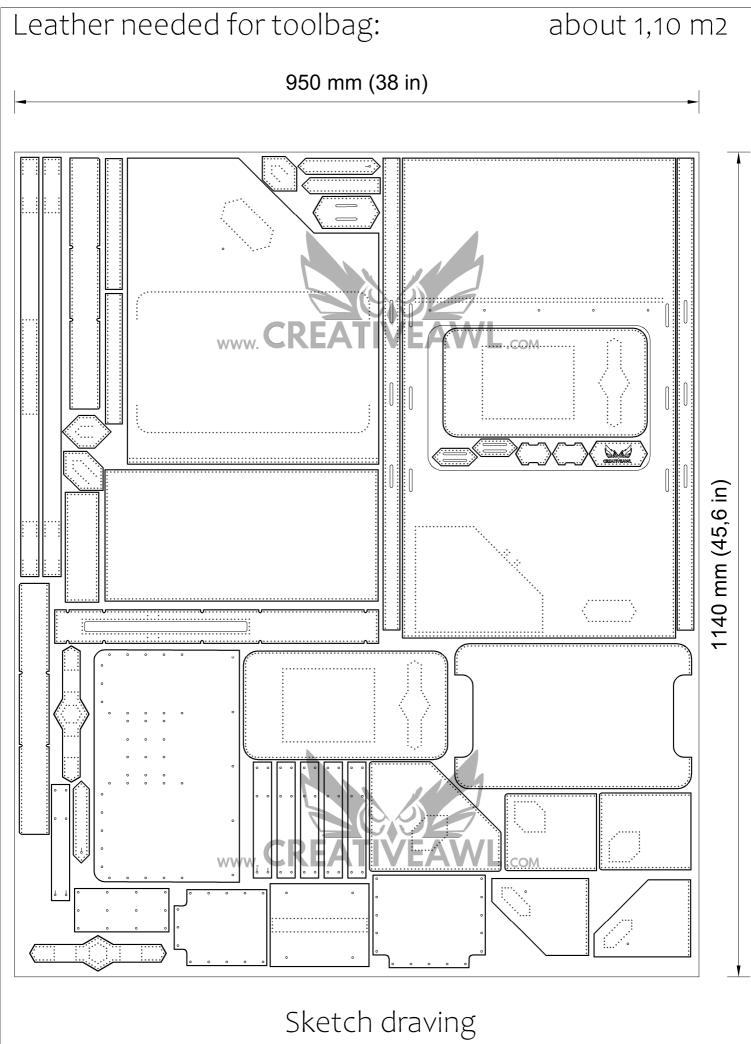



Bill of materials

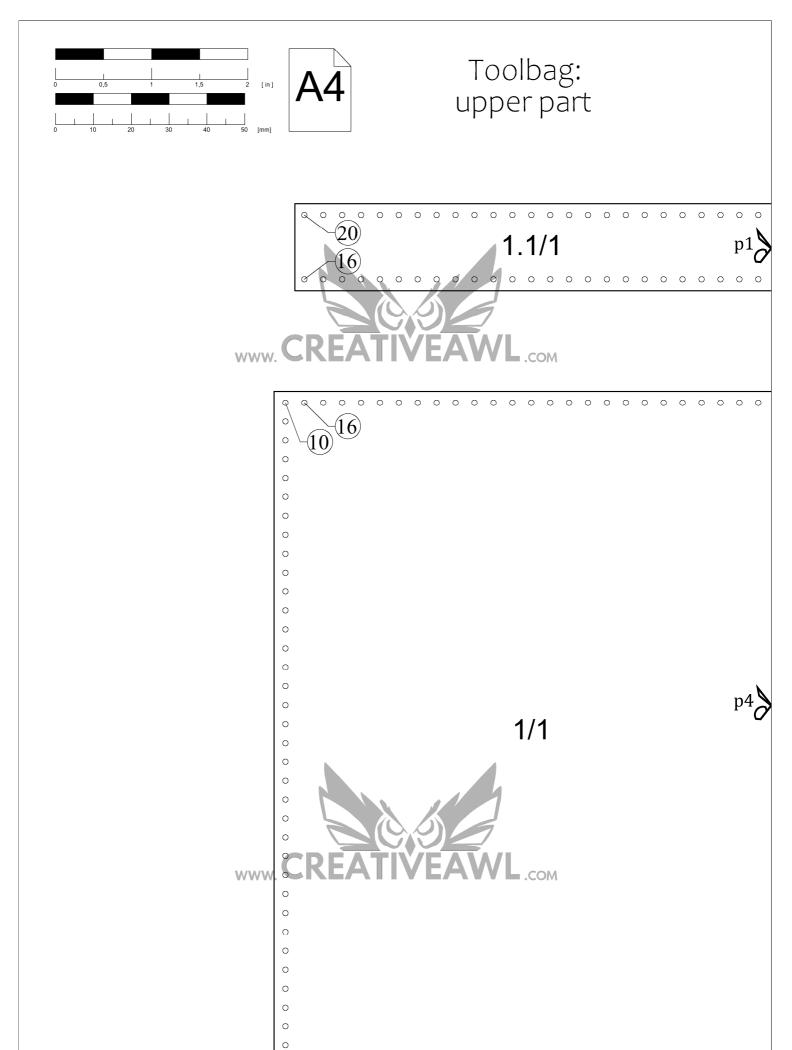


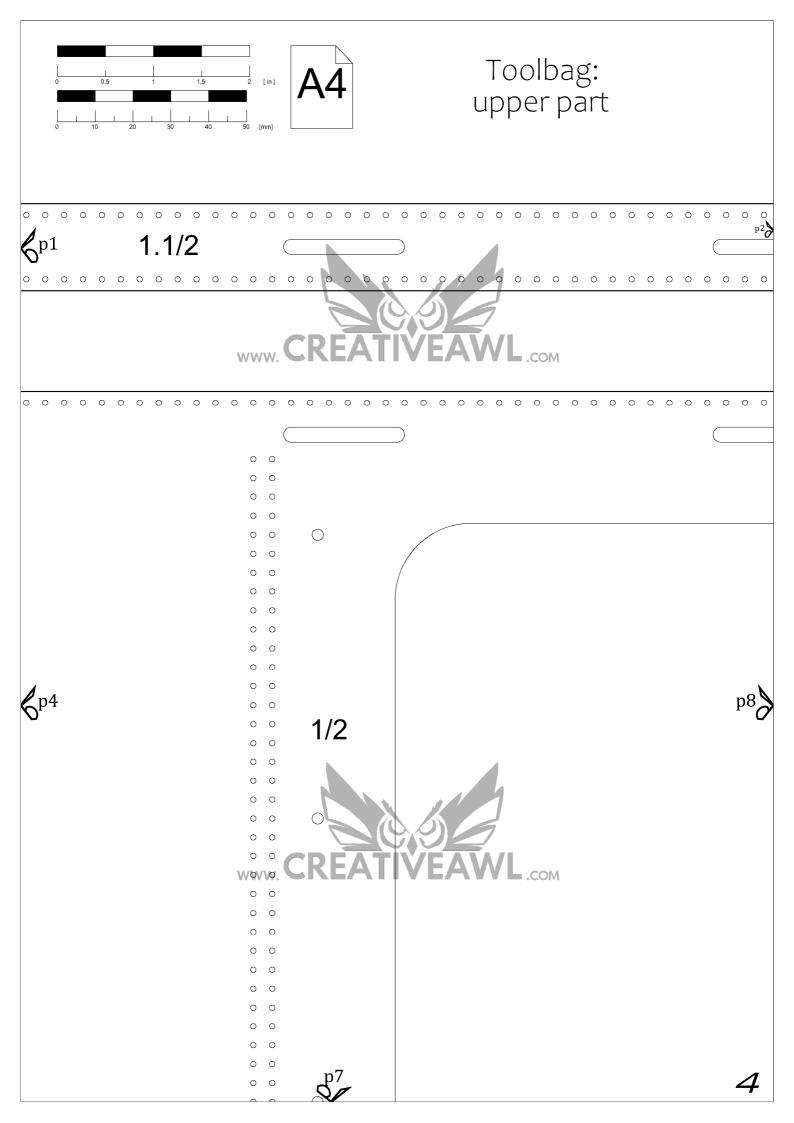

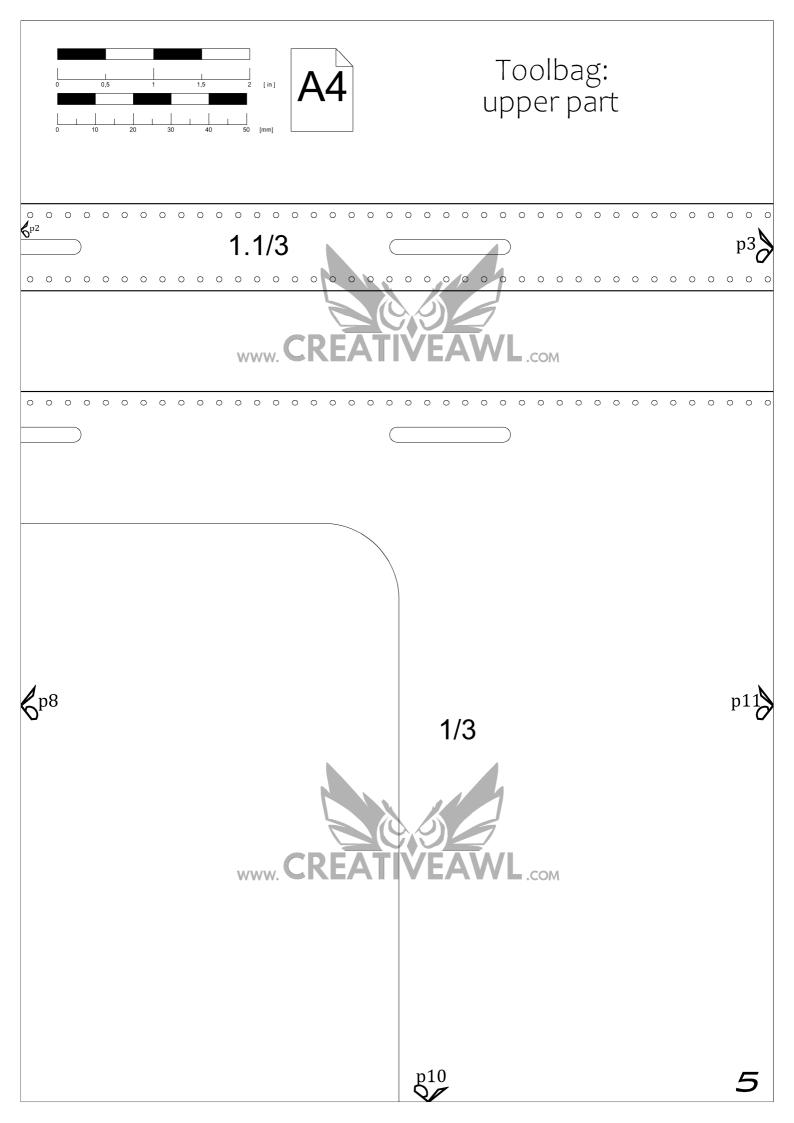

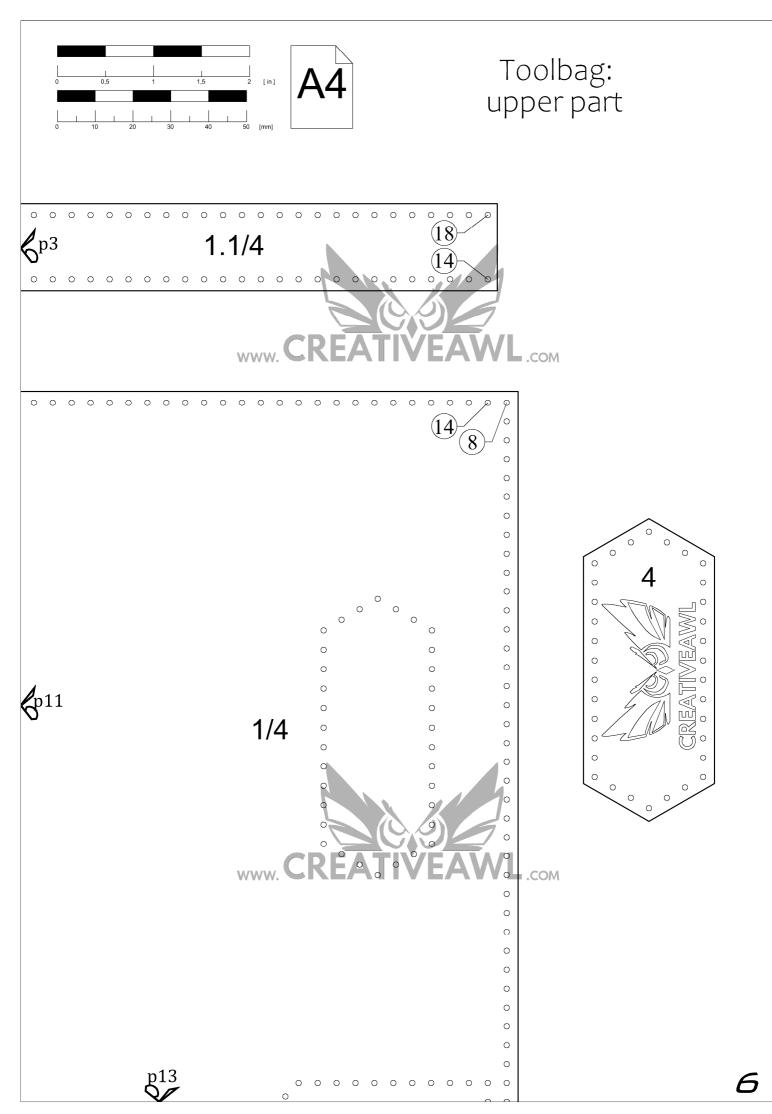


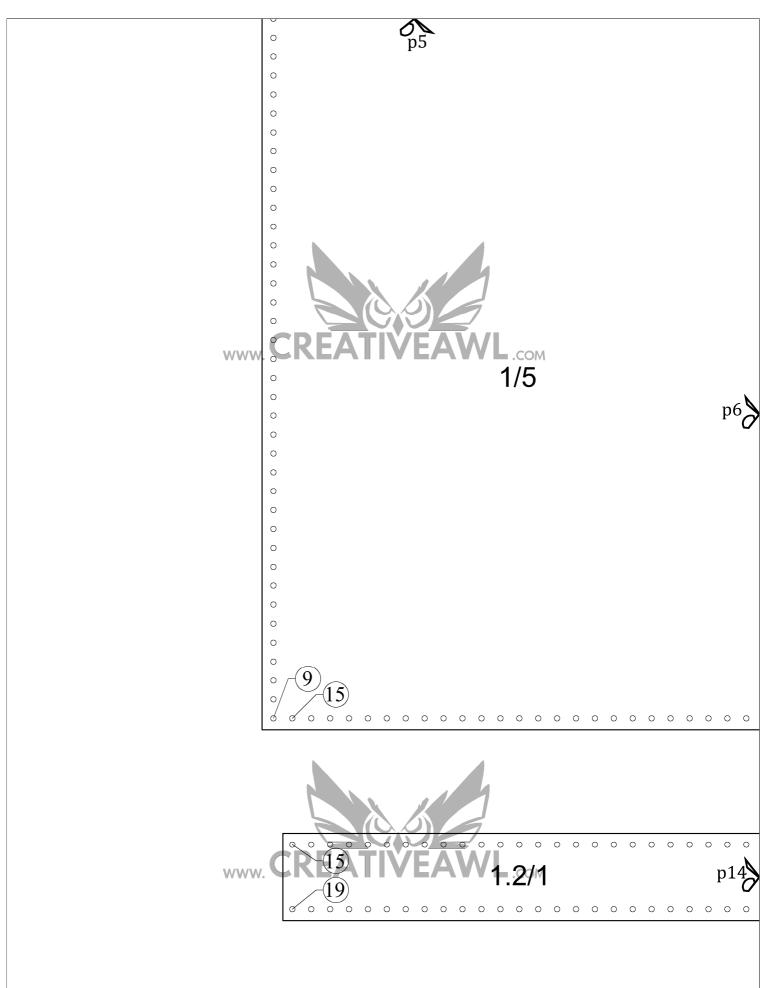








Toolbag: upper part

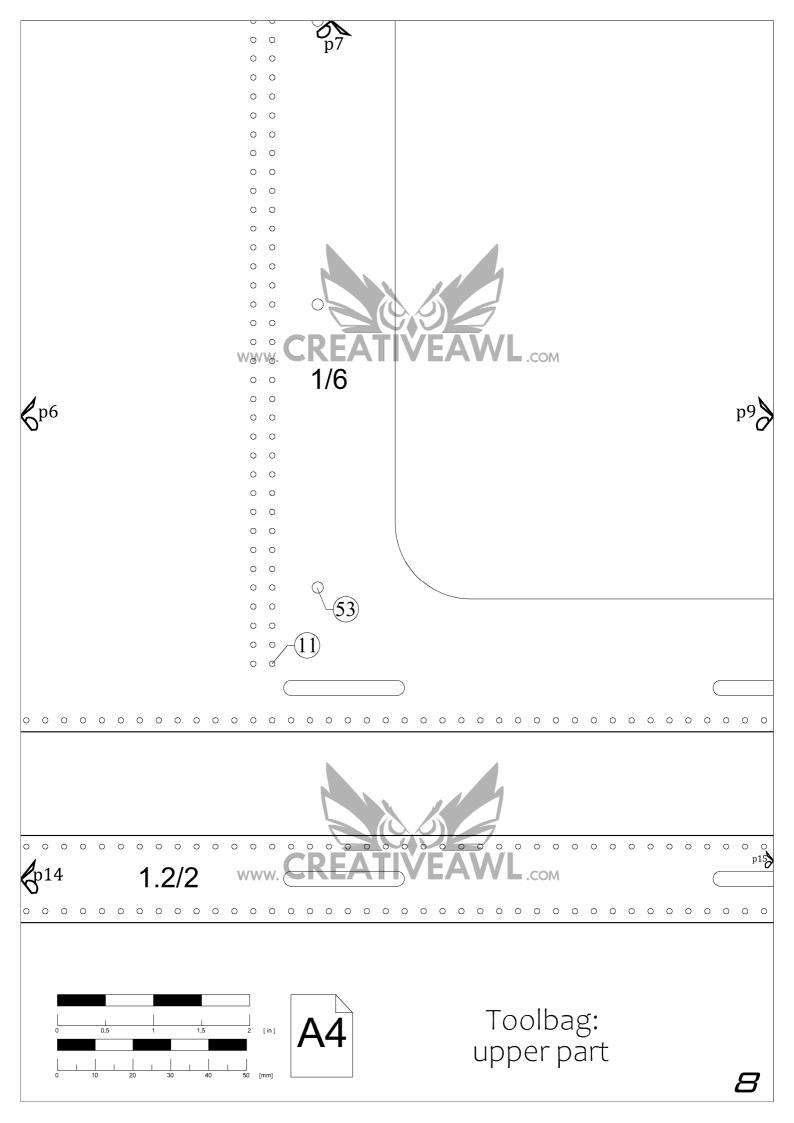

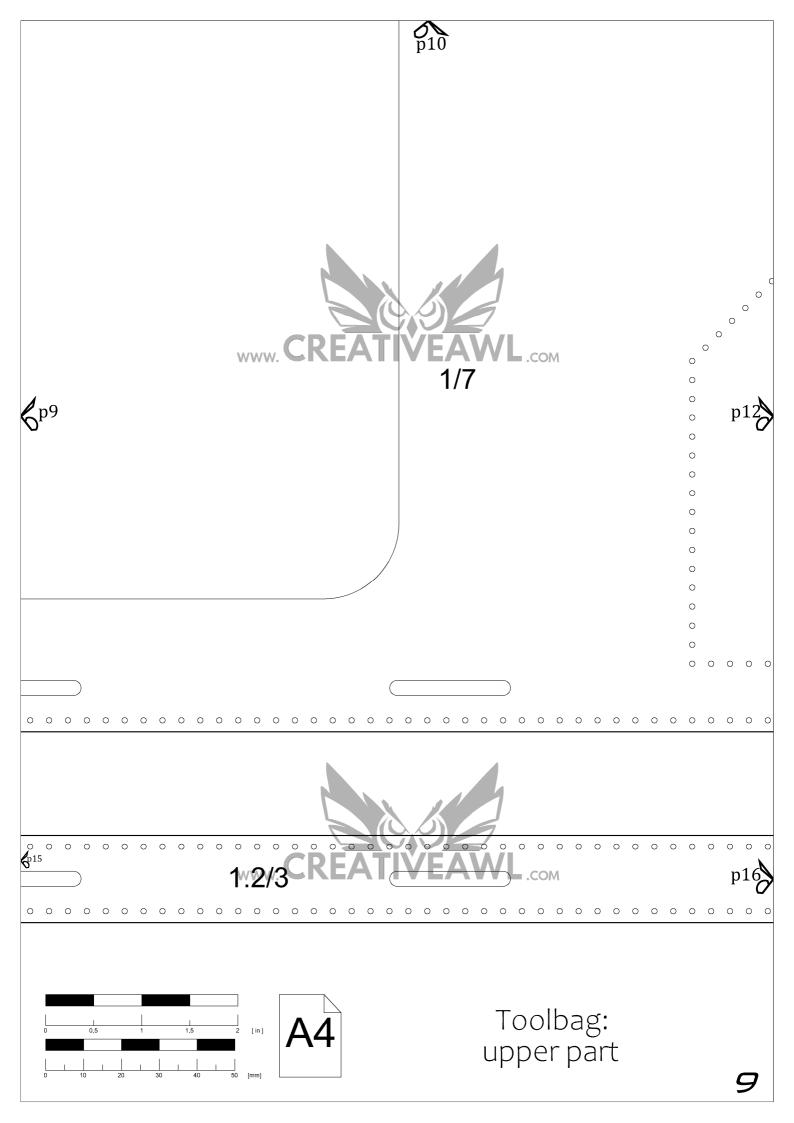

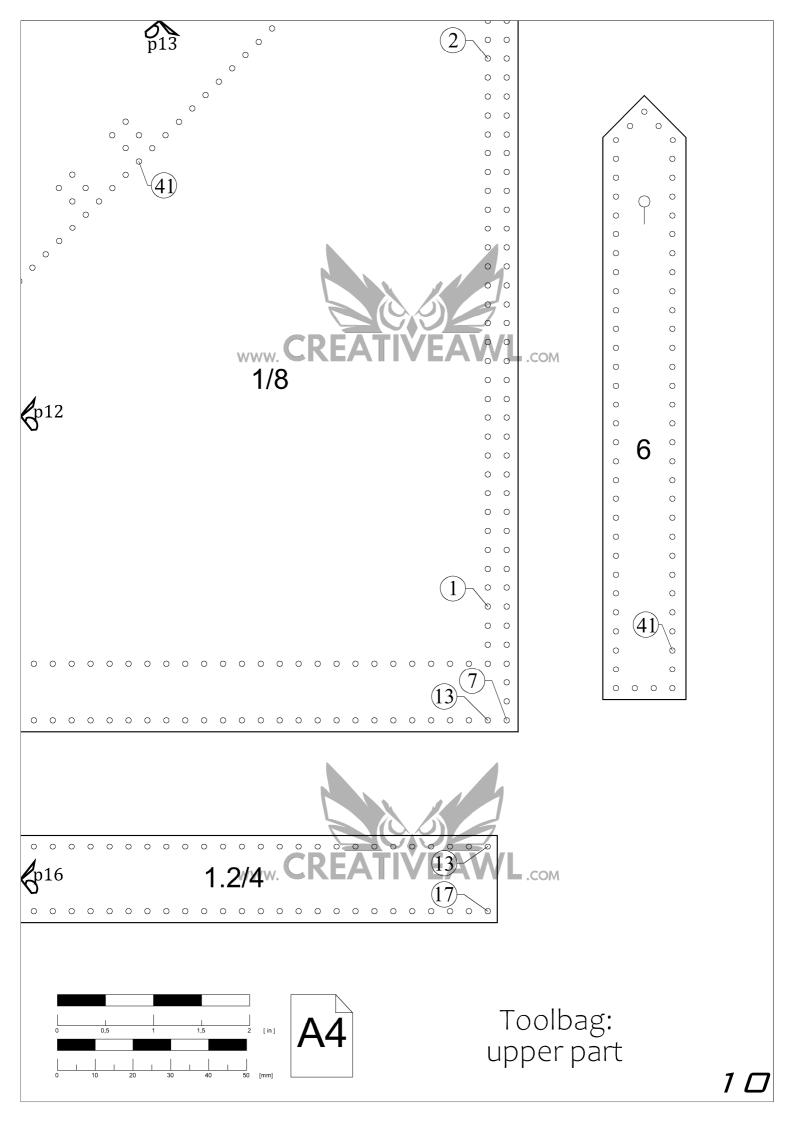






#### Toolbag: flap of the bag



3/1









### Toolbag: flap of the bag





0 0 0


**6**p18

3/2



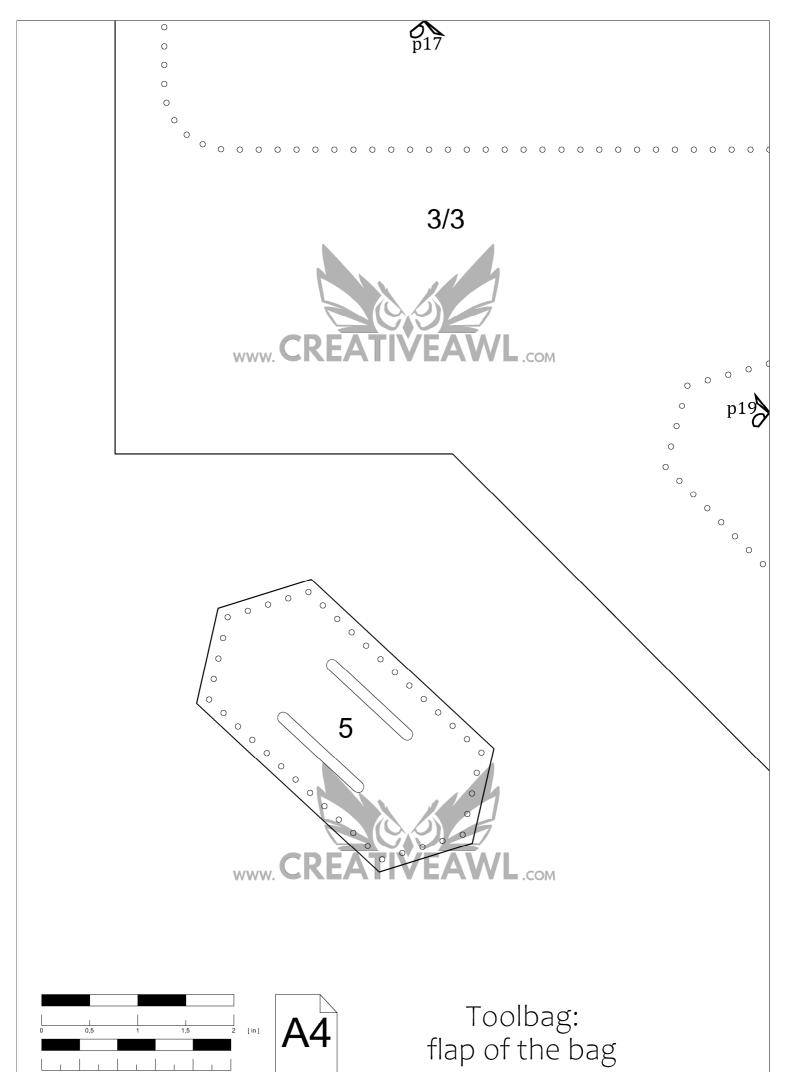


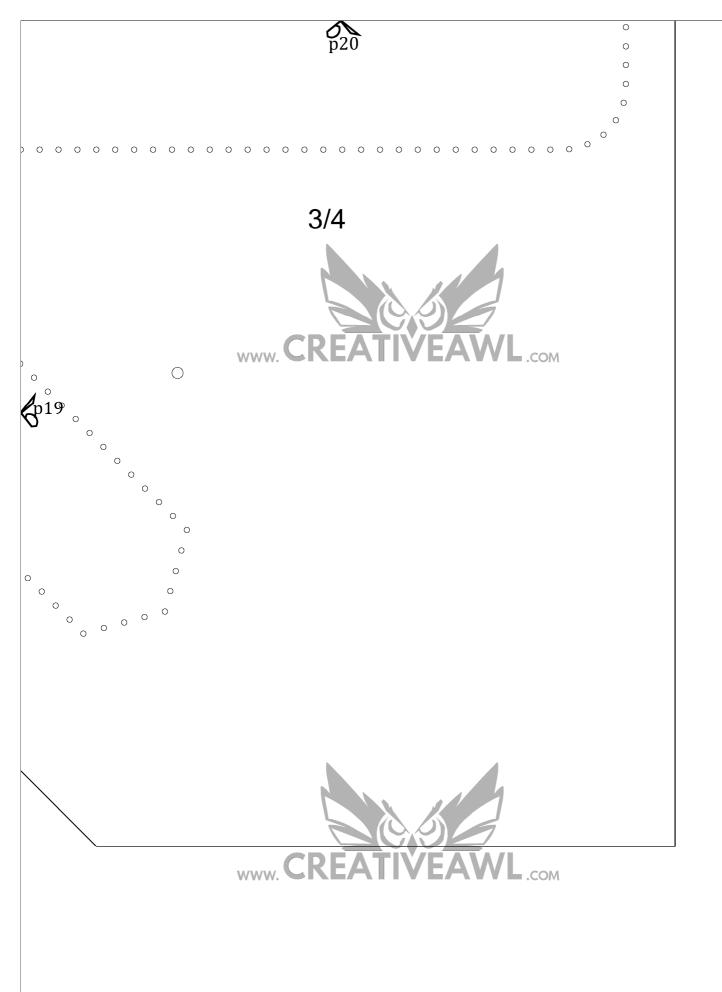







Toolbag: flap of the bag




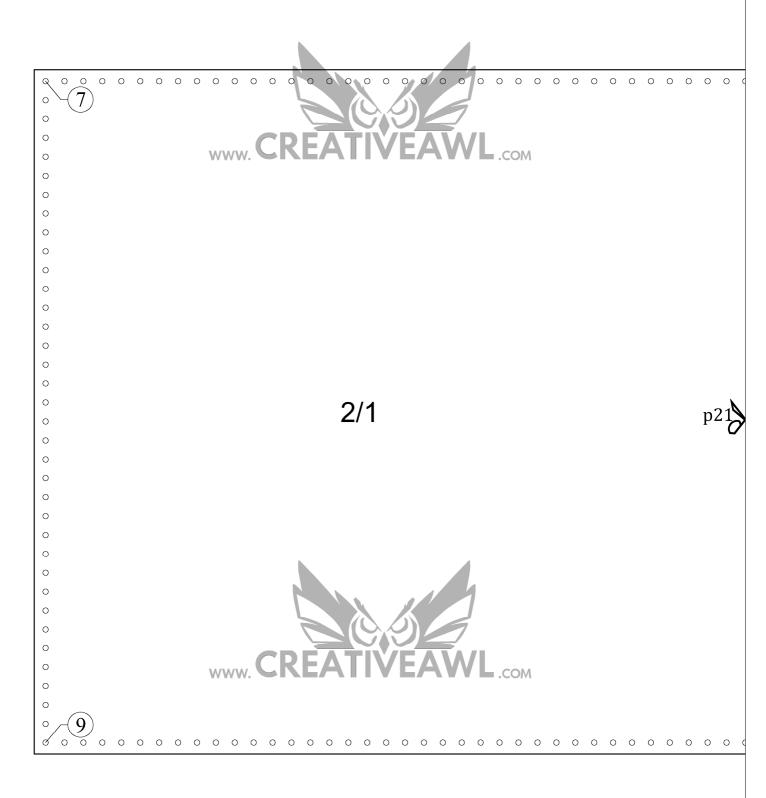






Toolbag: lower part






**€**p21 2/2









Toolbag: lower part (10)

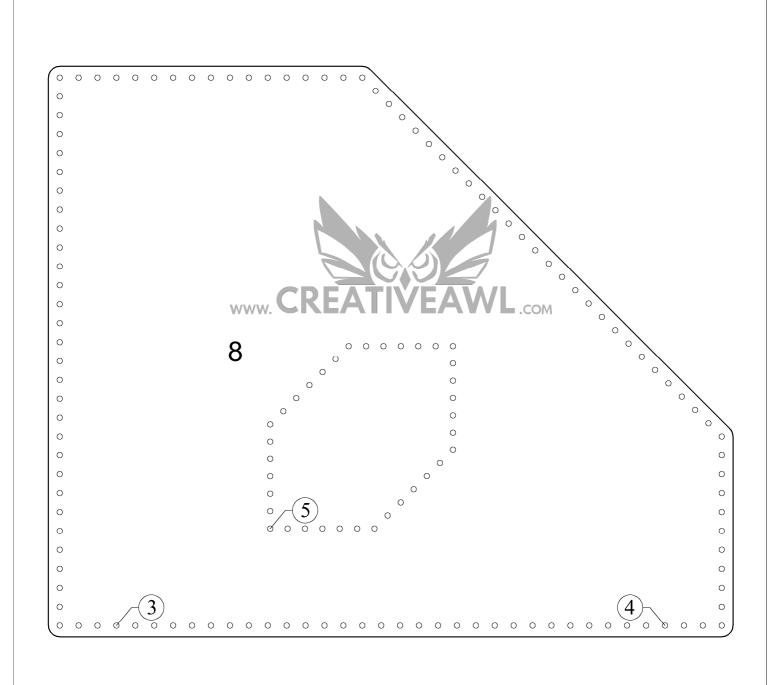


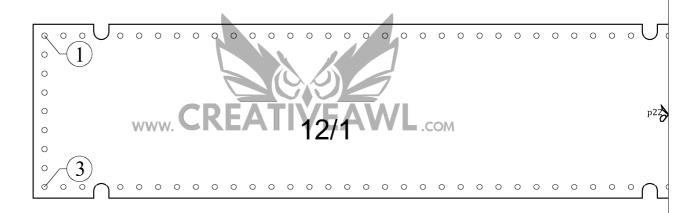








Toolbag: front pocket

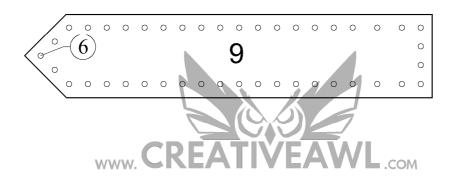

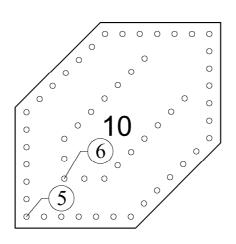

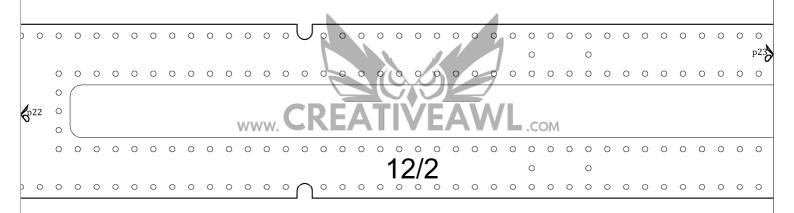








Toolbag: front pocket



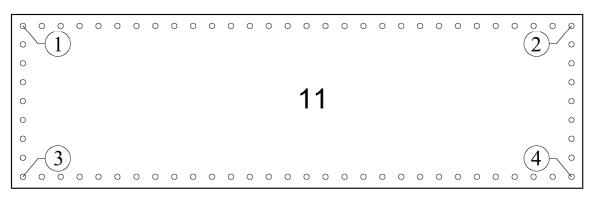


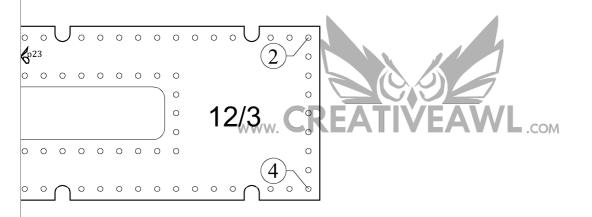









Toolbag: front pocket

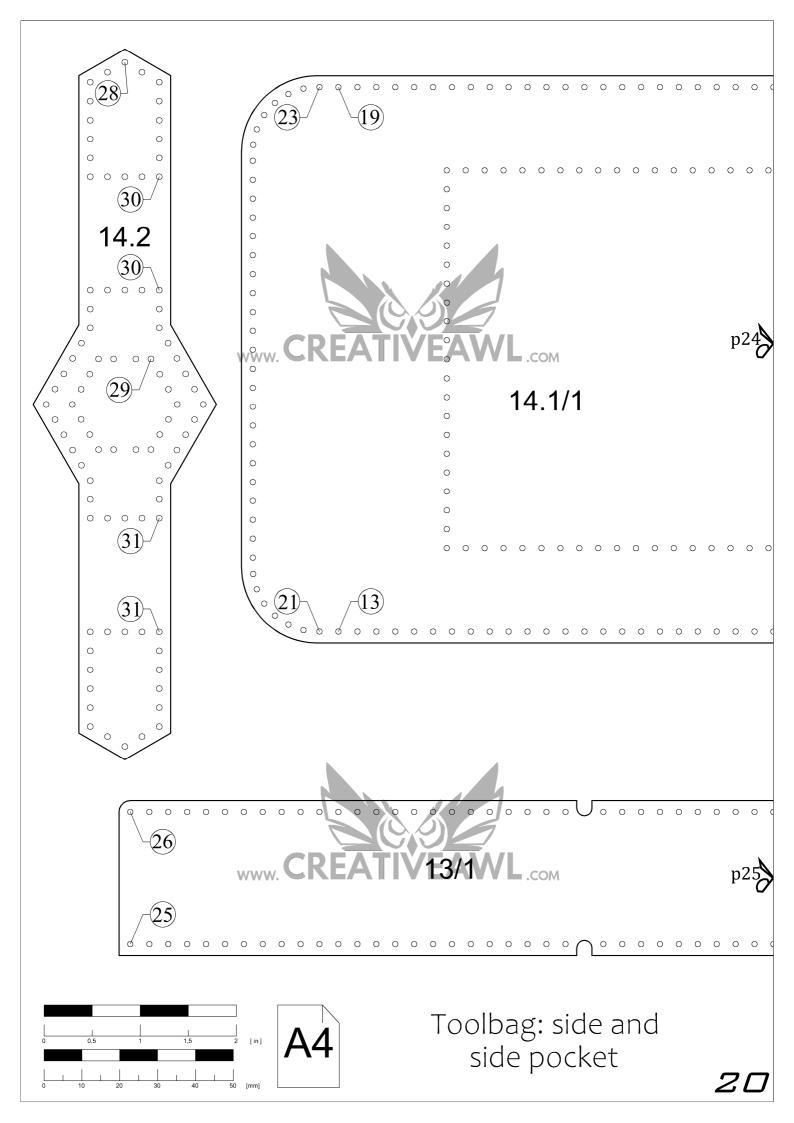


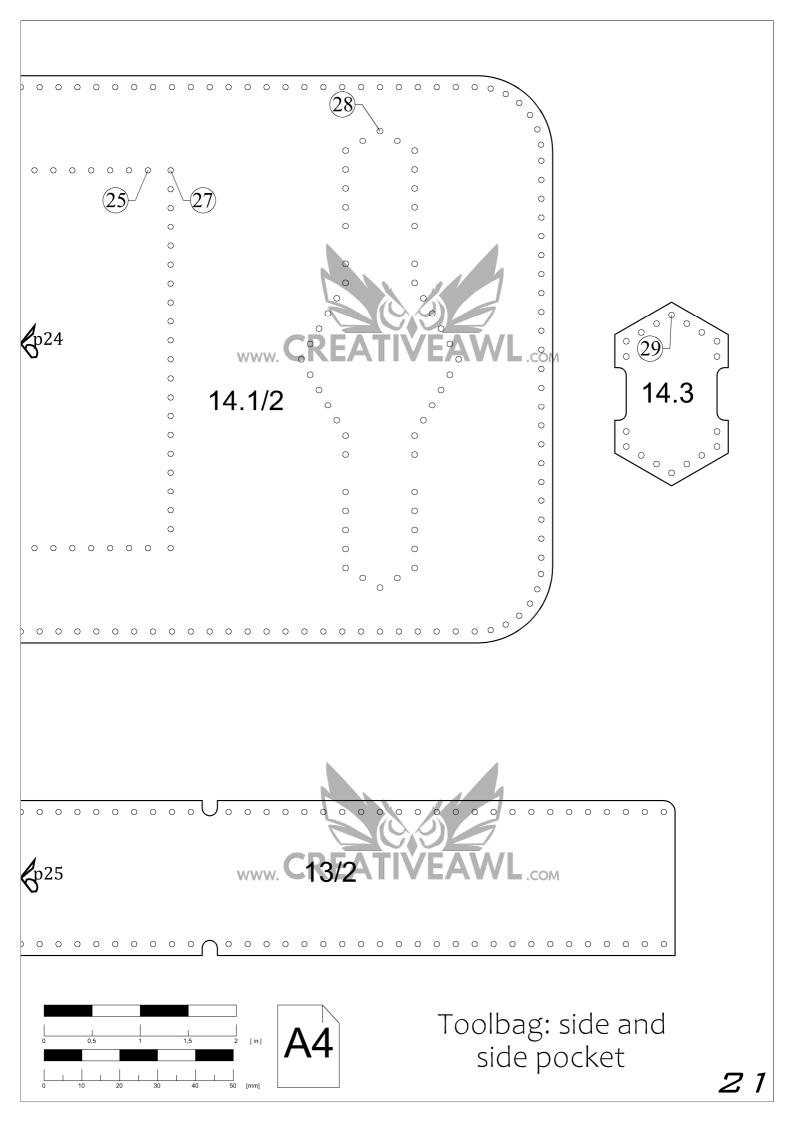


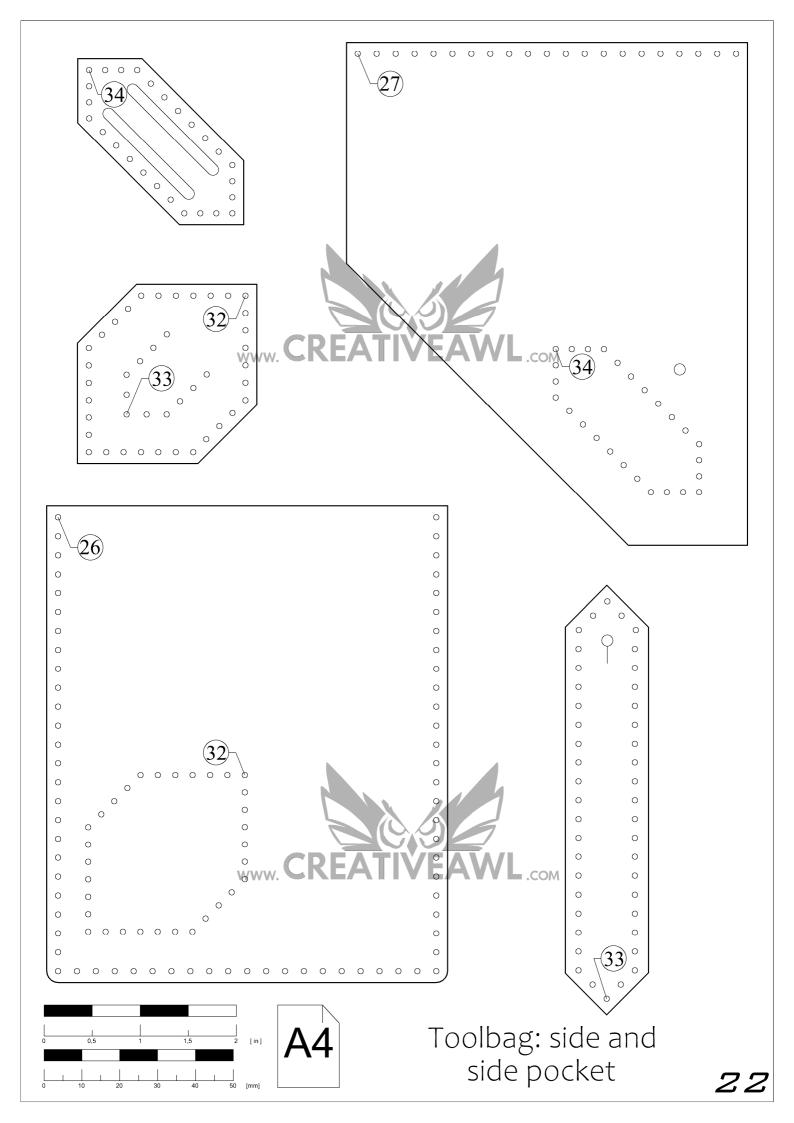


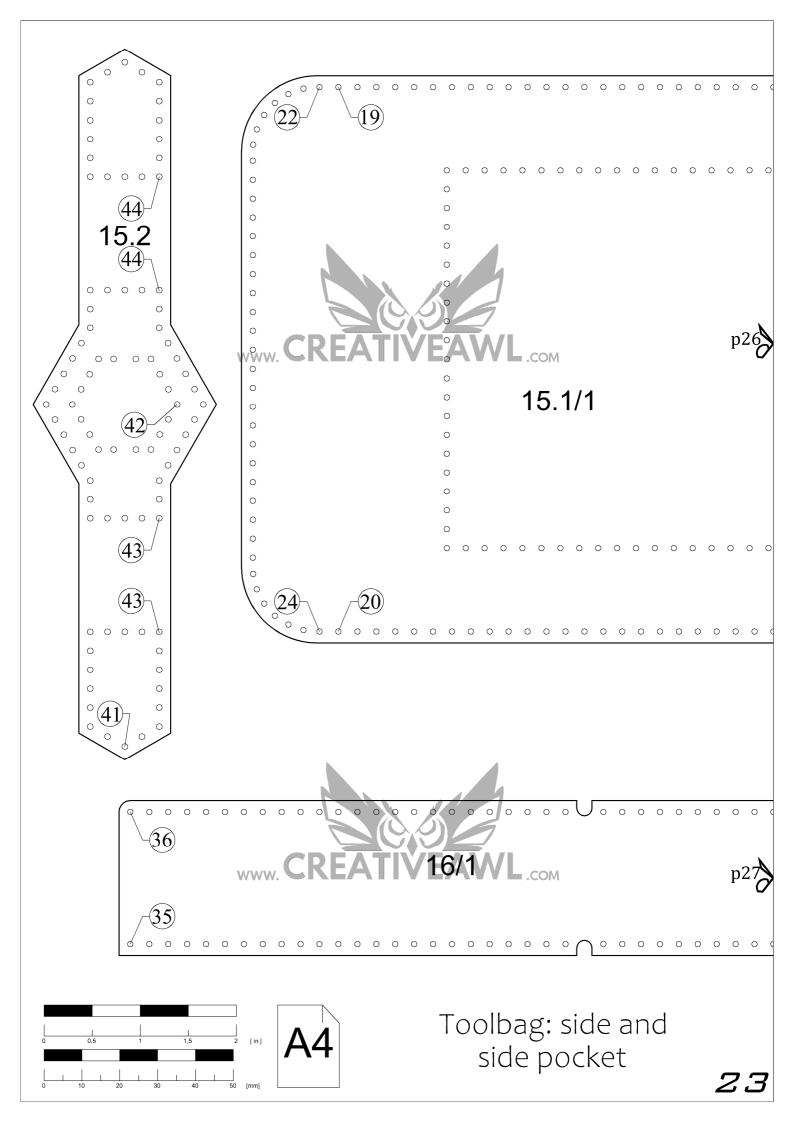


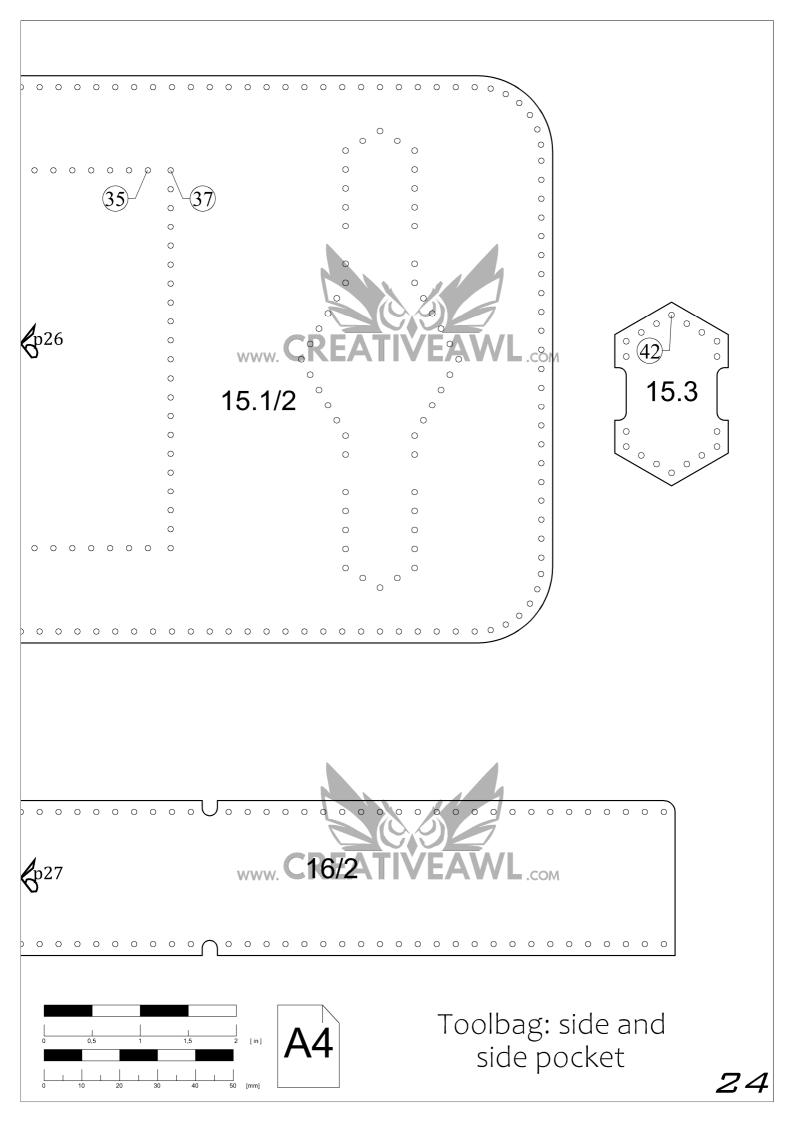

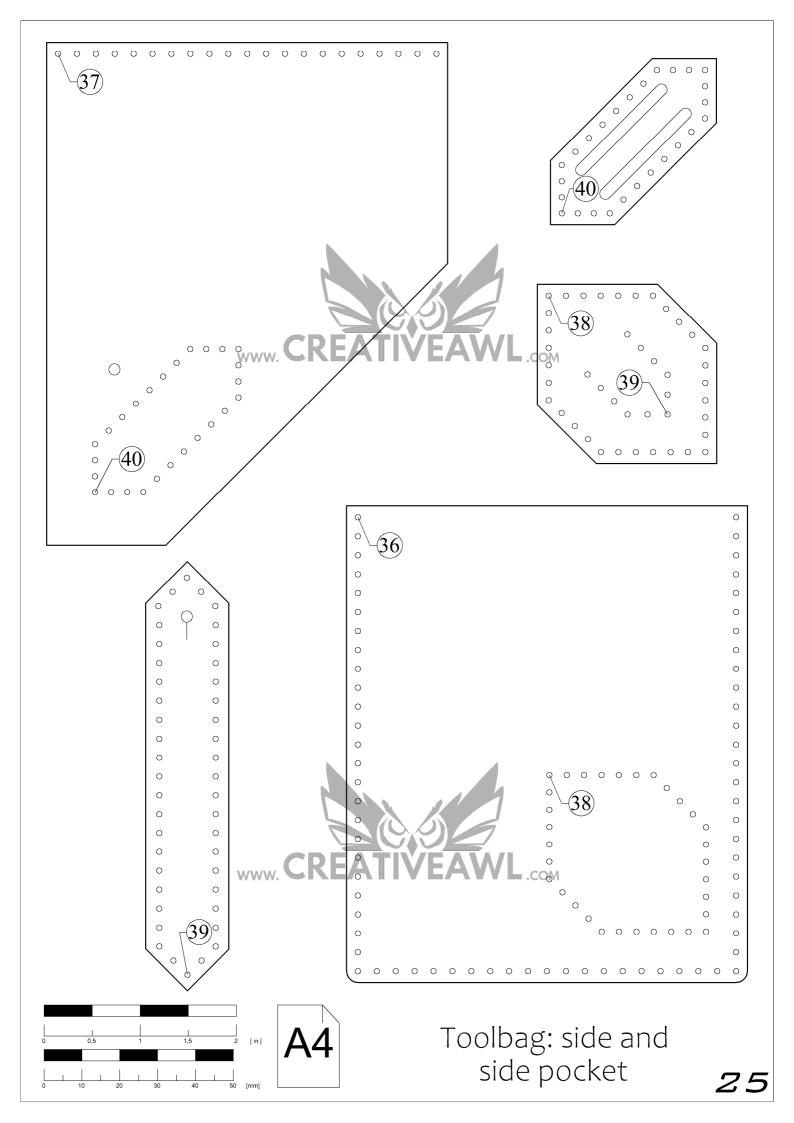


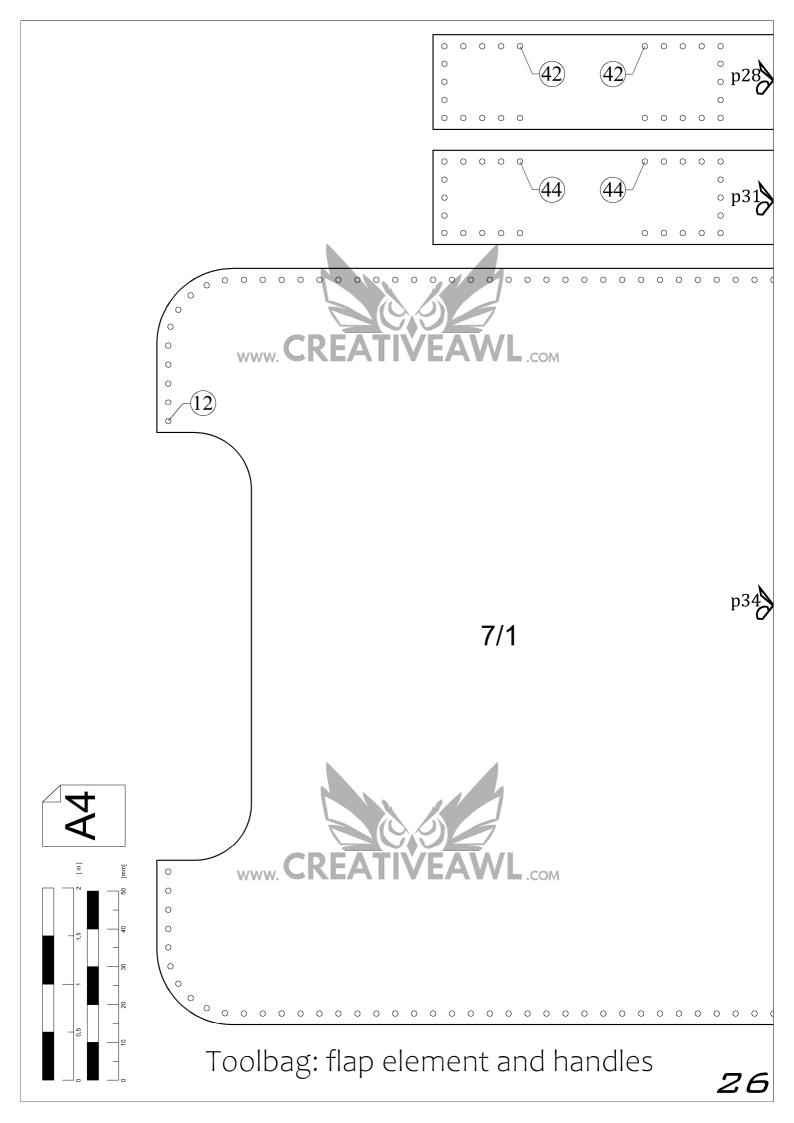


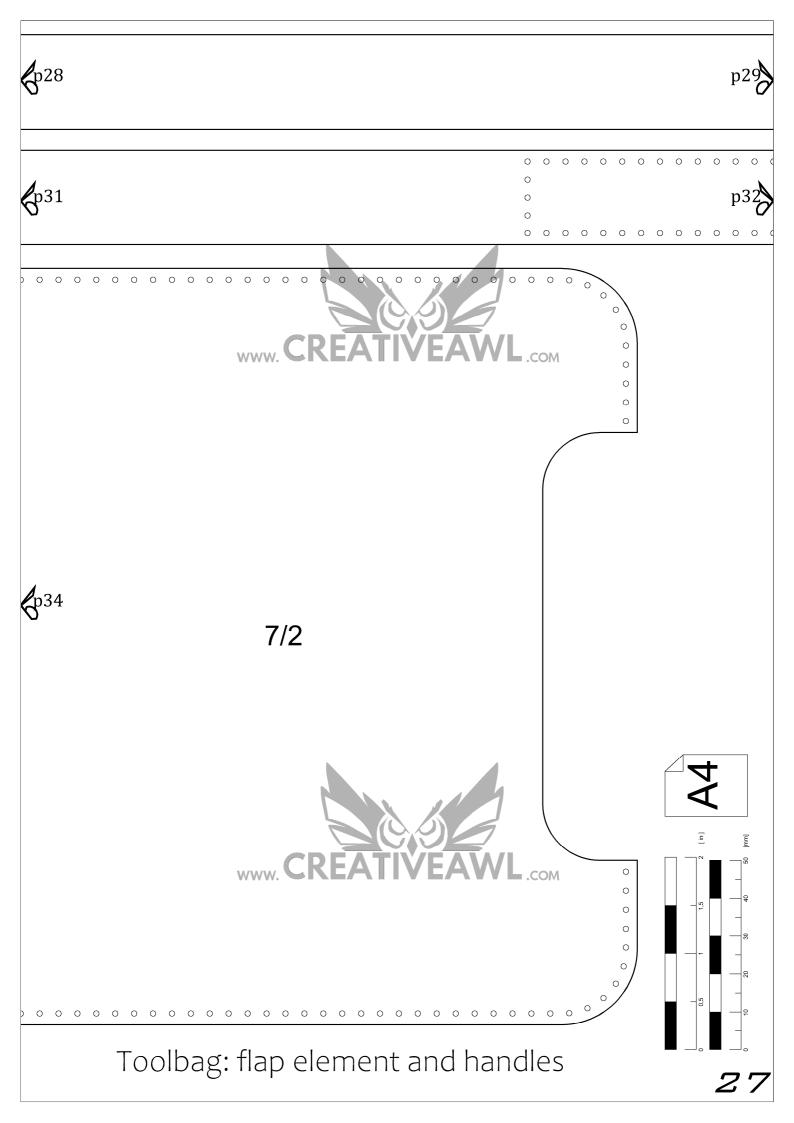

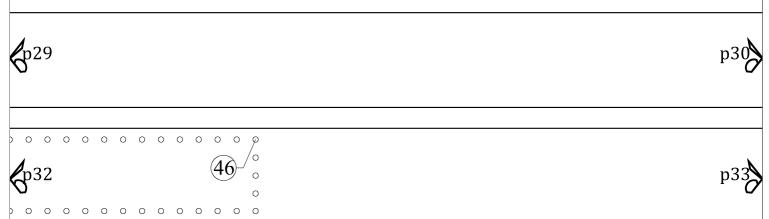




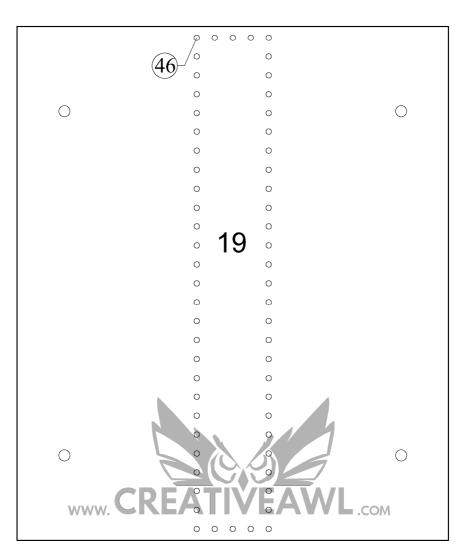







Toolbag: handles

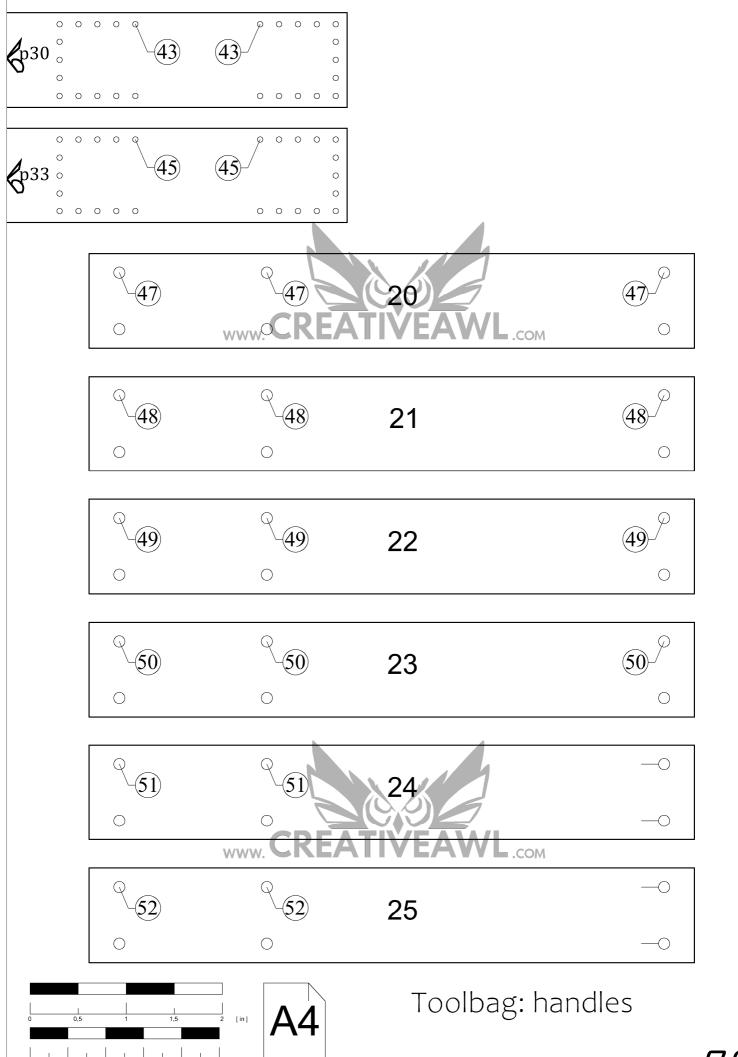


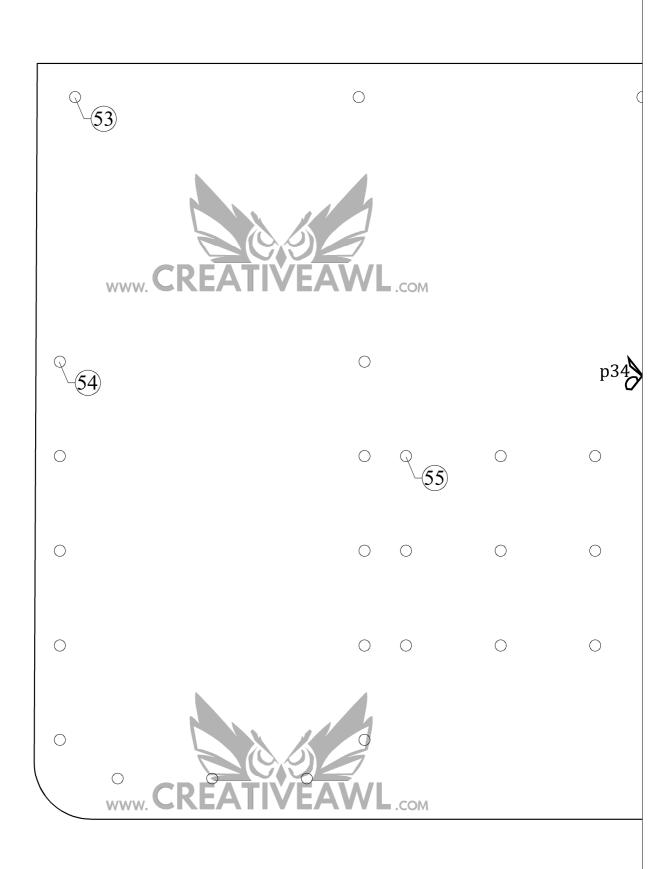







Toolbag: inside pocket

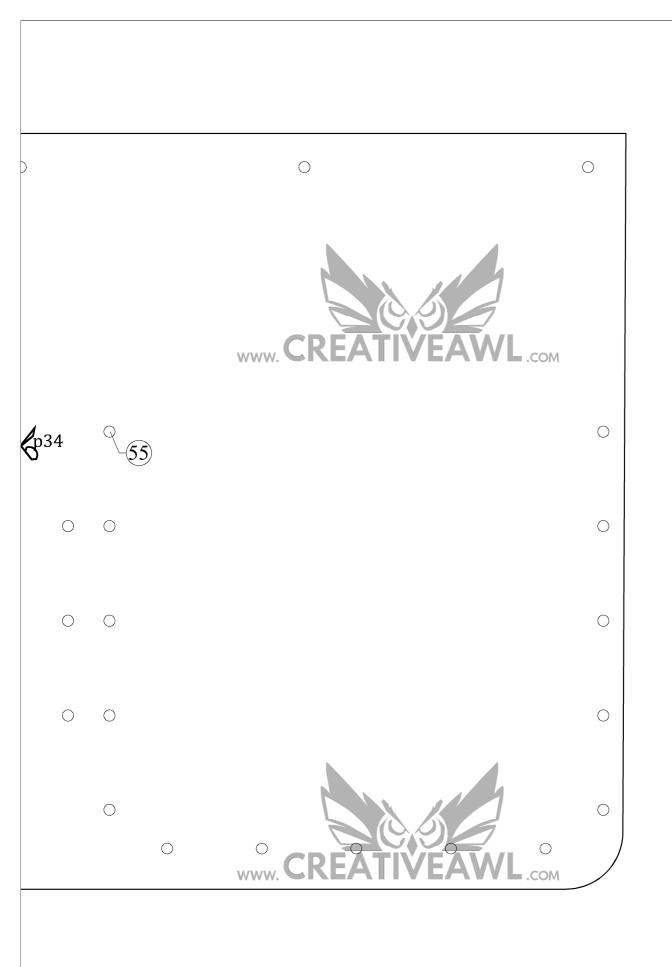







Toolbag: inside pocket

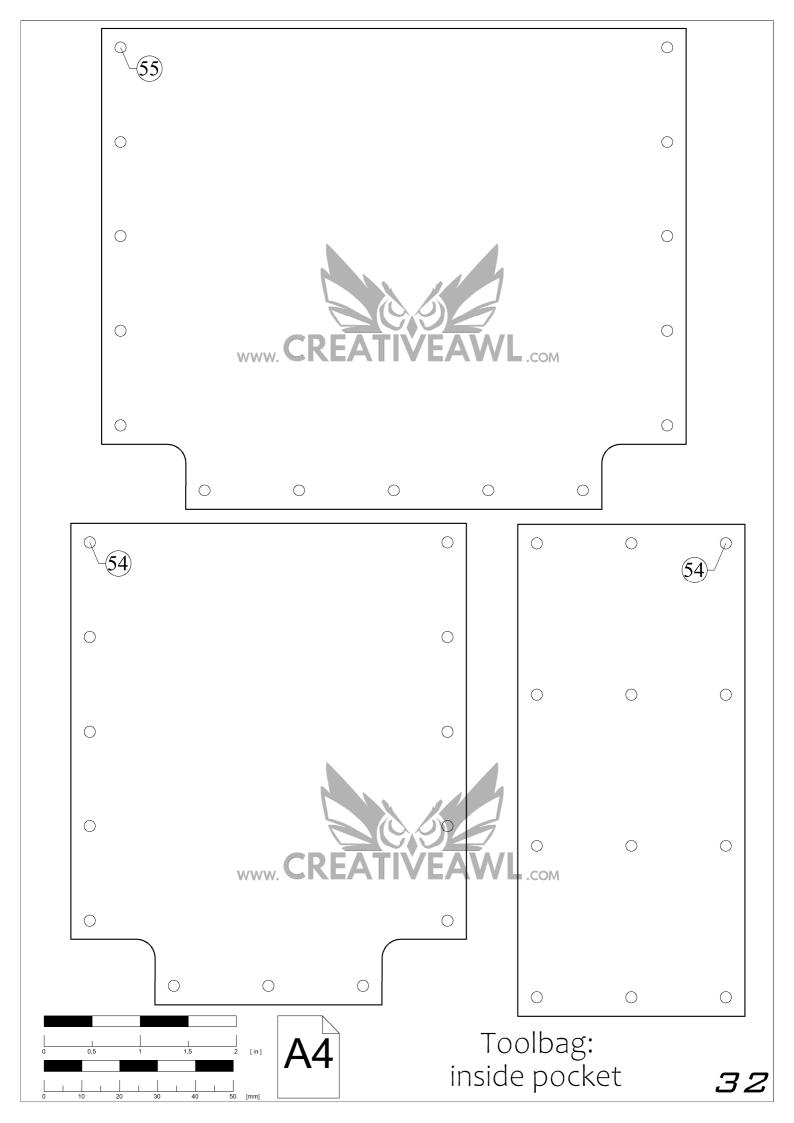

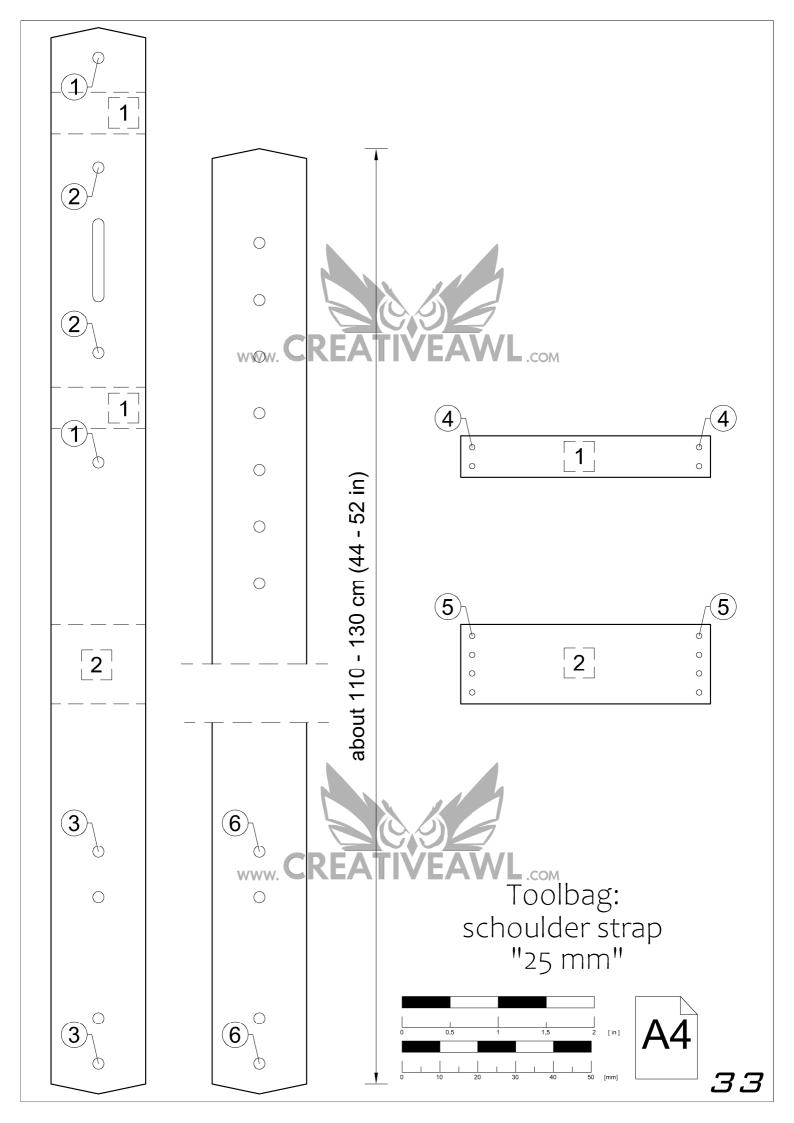

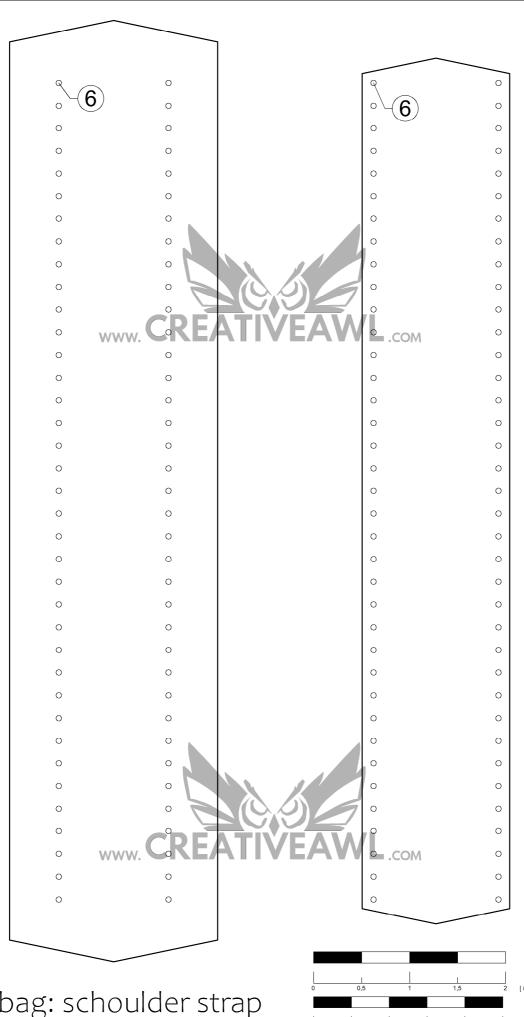

Toolbag: schoulder strap arm guard "25 mm"

